Brickcom

PC Based Network Video Recorder

BRC-64
User's Manual

Quality Service Group

Brickcom

Product name:	PC Based Network Video Recorder (BRC-64)
Release Date:	2010/03
Manual Revision:	V1.10
Web site:	www.brickcom.com
Email:	technical@brickcom.com
	info@brickcom.com
Made in Taiwan.	©2010 Brickcom Corporation. All Rights Reserved

Table of Contents

Package Contents 1
Overview 2
System Requirements 3
Software Installation 4
    EasyConfig 11
    Start with PC-NVR 20
Configure the PC-NVR 23
    Live View 23
    Schedule Record 32
    Motion Detection 35
    Event 42
    Snapshot 44
    E-Map 45
    Lock 48

Package Contents

a. Brickcom Software Kit CD 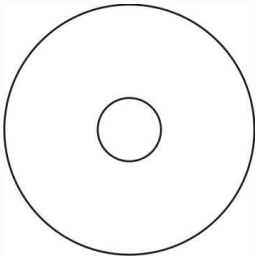	b. Quick Guide 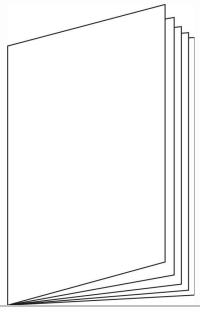

Overview

The Brickcom BRC64 is an advanced PC-based NVR that allows users to manage up to 64 Brickcom IP cameras for live viewing and video recording. With the support of Mega-pixel resolution and H.264 compression, it uses less bandwidth while offering the optimal image viewing and recording quality.

Designed for flexibility and user-friendliness, the BRC64 has many features which enable easy setup and management of the entire IP surveillance system. The E-MAP gives users a full outline of the monitored areas and the “Smart Camera Search” feature makes it possible to gain instant access to any Brickcom IP camera on the specific site. “Smart Motion Detection” and extensive event configuration work together to make an effective IP system. Support for viewing and recording at different frame rates is available for efficient use of disk space. Flexible recording options include manual, event-triggered, scheduled or continuous.

With the help of the Brickcom BRC64 and its IP cameras, users can quickly build a secure IP surveillance system.

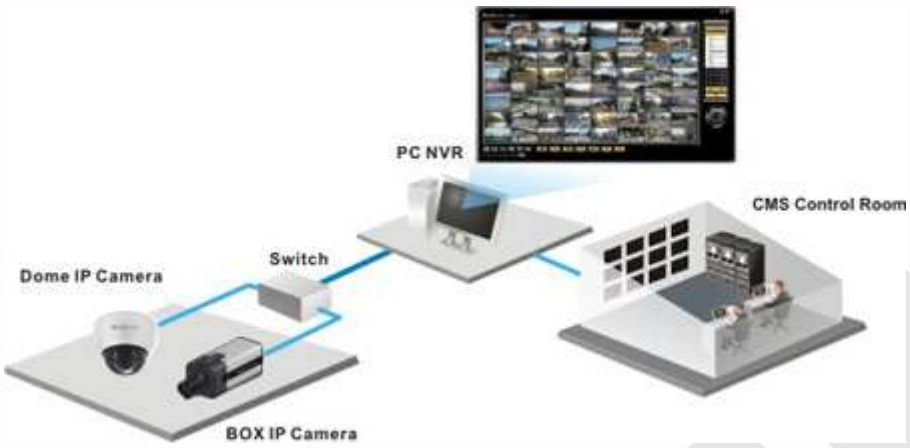

System Requirements

Operating System:

Microsoft Windows XP Home Edition SP2

Microsoft Windows XP Professional SP2

Computer:

IBM PC/AT Compatible

CPU:

Pentium 3GHz or faster

Memory:

1024 MB or more

Monitor:

1024 x 768 pixels or more, 24-bit True color or better

Network Interface:

10/100Mbps Network interface card must be installed

Web Browser:

Microsoft Internet Explorer 6.0 SP2 or higher

Adobe Reader:

Adobe Reader 8.0 or higher

Audio:

- The audio function will not work if a sound card is not installed in the PC. Audio may be interrupted depending on network traffic.

Software Installation

1. Insert the Installation CD into the CD-ROM driver. Run Auto-run Tool directly from the CD-ROM to start the installation. When installing the Brickcom software kit for the first time, select a desired language for the interface. The available languages are listed in the scroll box. Click “Install” and follow the steps to install the easy configuration wizard on your computer.

2. In the Install Shield Wizard dialog box, click <Next> to continue.

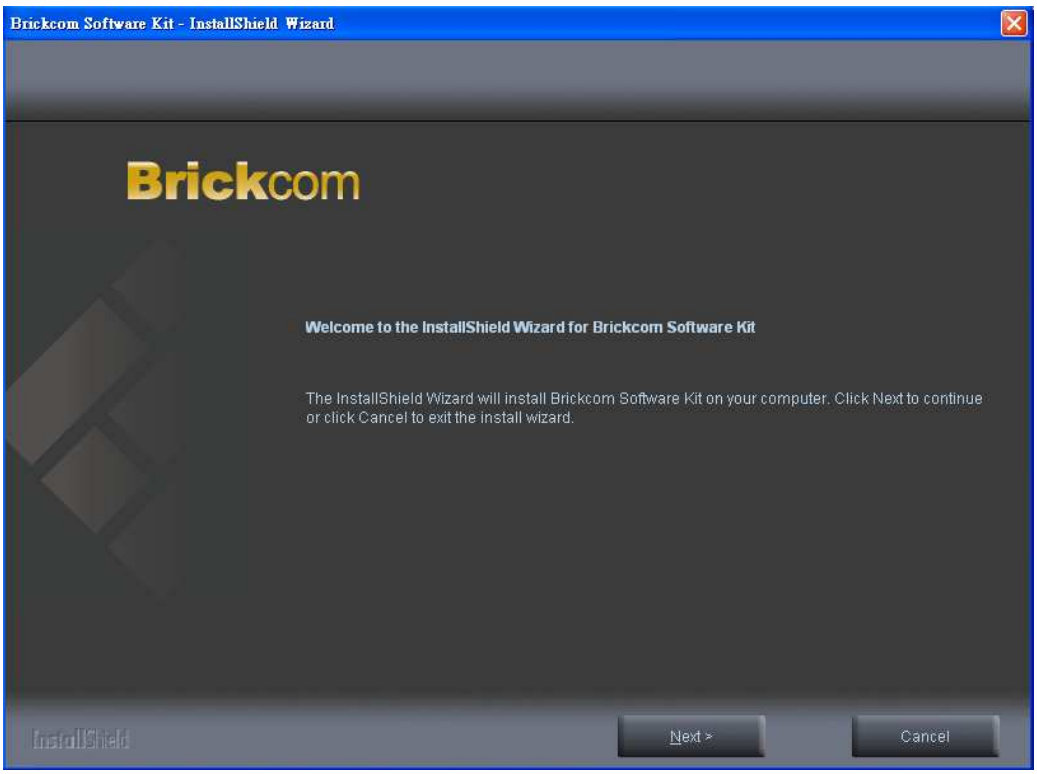
Brickcom Software Kit - InstallShield Wizard
Brickcom
Welcome to the InstallShield Wizard for Brickcom Software Kit
The InstallShield Wizard will install Brickcom Software Kit on your computer. Click Next to continue or click Cancel to exit the install wizard.
InstallShield
Next >
Cancel

3. Read the End-User License Agreement and check the option “I accept the terms of the license agreement”. Click <Next> to continue.

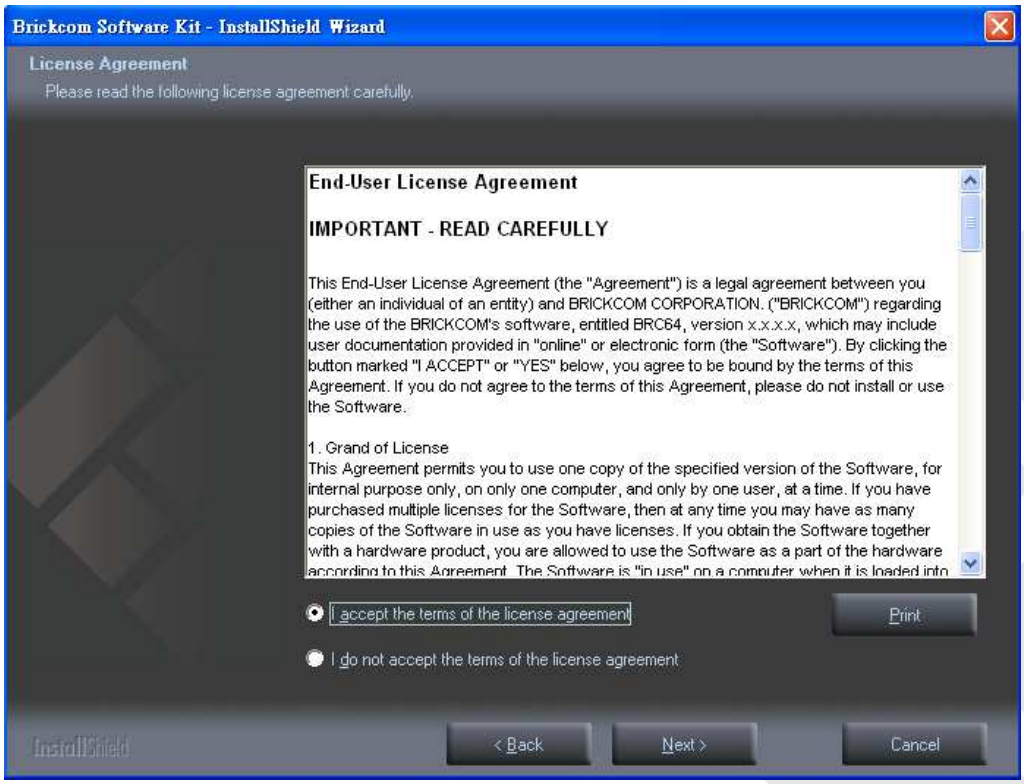
Brickcom Software Kit - InstallShield Wizard
License Agreement
Please read the following license agreement carefully.
End-User License Agreement
IMPORTANT - READ CAREFULLY
This End-User License Agreement (the "Agreement") is a legal agreement between you (either an individual of an entity) and BRICKCOM CORPORATION. ("BRICKCOM") regarding the use of the BRICKCOM's software, entitled BRC64, version x.x.x.x, which may include user documentation provided in "online" or electronic form (the "Software"). By clicking the button marked "I ACCEPT" or "YES" below, you agree to be bound by the terms of this Agreement. If you do not agree to the terms of this Agreement, please do not install or use the Software.
1. Grand of License
This Agreement permits you to use one copy of the specified version of the Software, for internal purpose only, on only one computer, and only by one user, at a time. If you have purchased multiple licenses for the Software, then at any time you may have as many copies of the Software in use as you have licenses. If you obtain the Software together with a hardware product, you are allowed to use the Software as a part of the hardware
I accept the terms of the license agreement
I do not accept the terms of the license agreement
Print
InstallShield
< Back
Next >
Cancel

4. Select appointed folder where setup will install files to. Click <**Change**> to modify the installation directory. Click <Next> to continue.

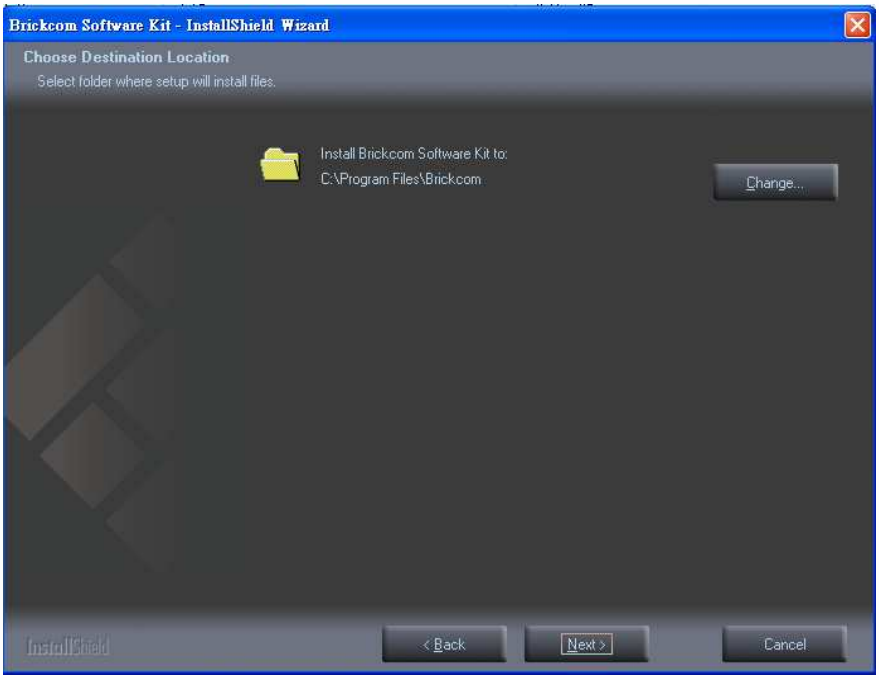

5. Select either “Complete” setup type or “Custom” setup type to install the system.
   a. **If COMPLETE SETUP TYPE is selected:**
      i. **All program features** will be installed into the default directory. Check the option “**Complete**” and then click <Next>.

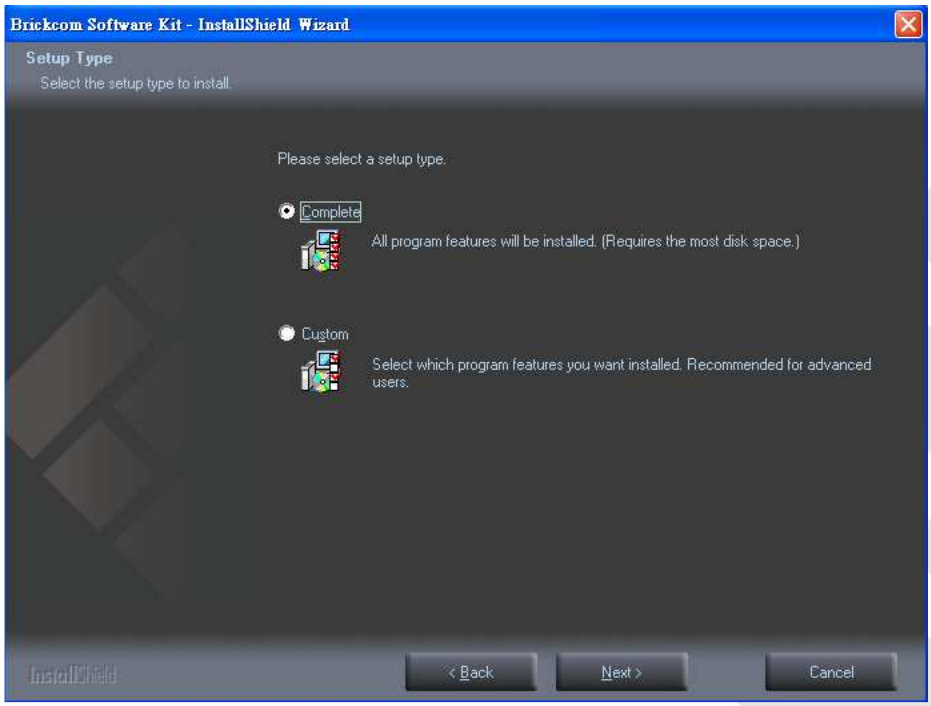
Brickcom Software Kit - InstallShield Wizard
Setup Type
Select the setup type to install.
Please select a setup type.
Complete
All program features will be installed. (Requires the most disk space.)
Custom
Select which program features you want installed. Recommended for advanced users.
InstallShield
< Back
Next >
Cancel

ii. The installation information will be displayed. Click <Next> to continue.

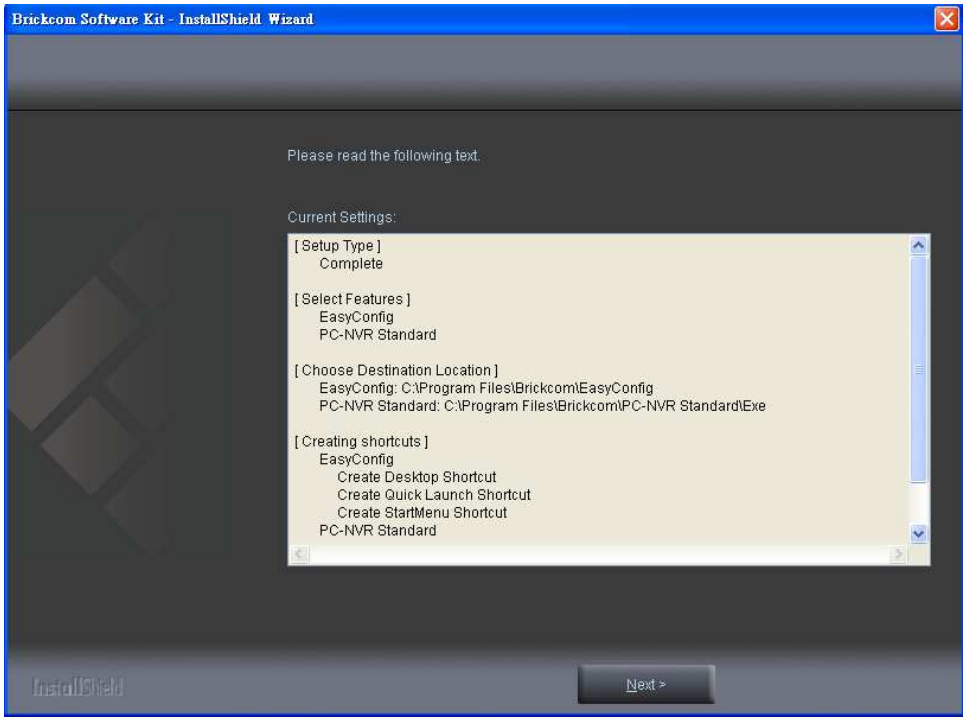

b. **If CUSTOM SETUP TYPE is selected:**

i. This option is recommended for advanced users. It can be used to install the system to a preferred directory or to select specific program feature(s).

ii. Check the option "**Custom**", and then click <Next>.

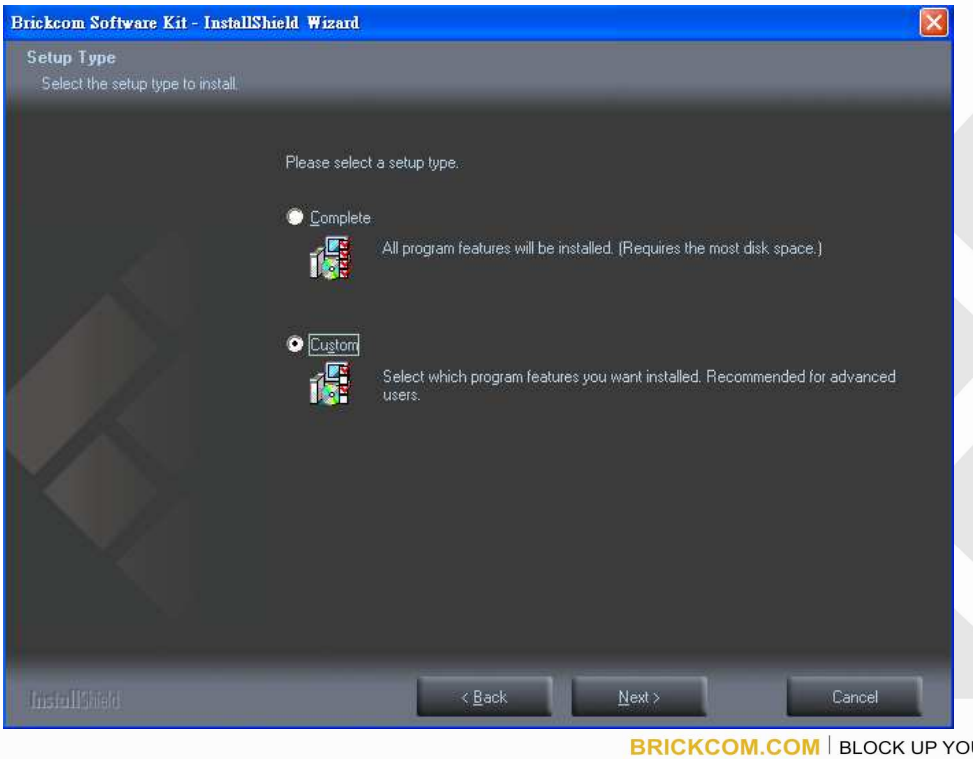
Brickcom Software Kit - InstallShield Wizard
Setup Type
Select the setup type to install.
Please select a setup type.
Complete
All program features will be installed. (Requires the most disk space.)
Custom
Select which program features you want installed. Recommended for advanced users.
InstallShield
< Back
Next >
Cancel

iii. Select the features to install. Click <Next> to continue.

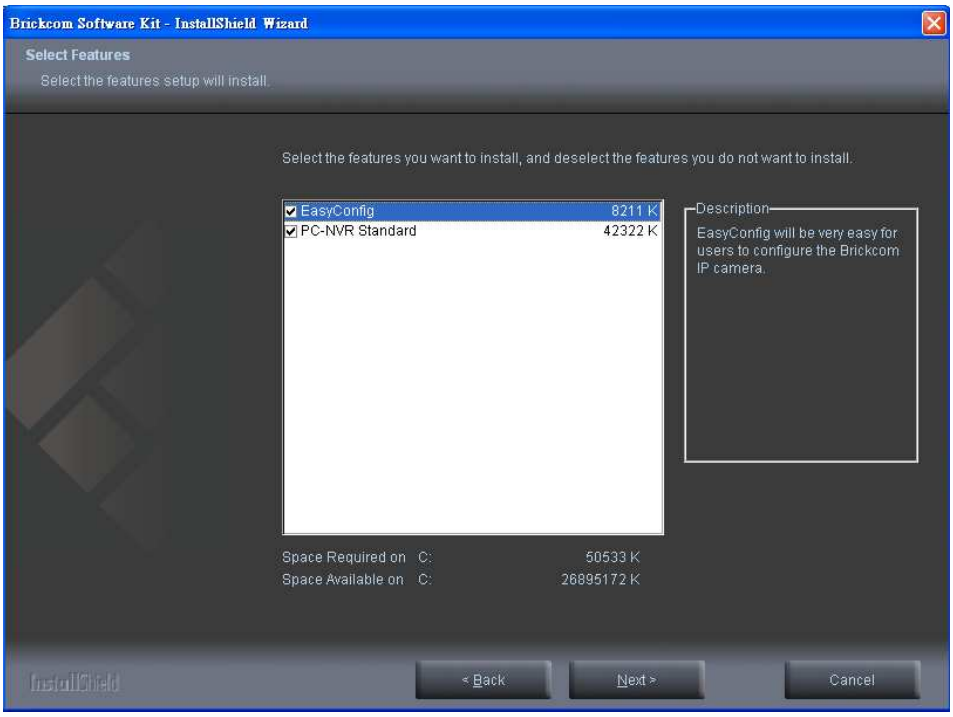
Brickcom Software Kit - InstallShield Wizard
Select Features
Select the features setup will install.
Select the features you want to install, and deselect the features you do not want to install.
EasyConfig 8211 K
PC-NVR Standard 42322 K
Description
EasyConfig will be very easy for users to configure the Brickcom IP camera.
Space Required on C: 50533 K
Space Available on C: 26895172 K
InstallShield
< Back
Next >
Cancel

iv. Select to create EasyConfig shortcuts. Click <Next> to continue.

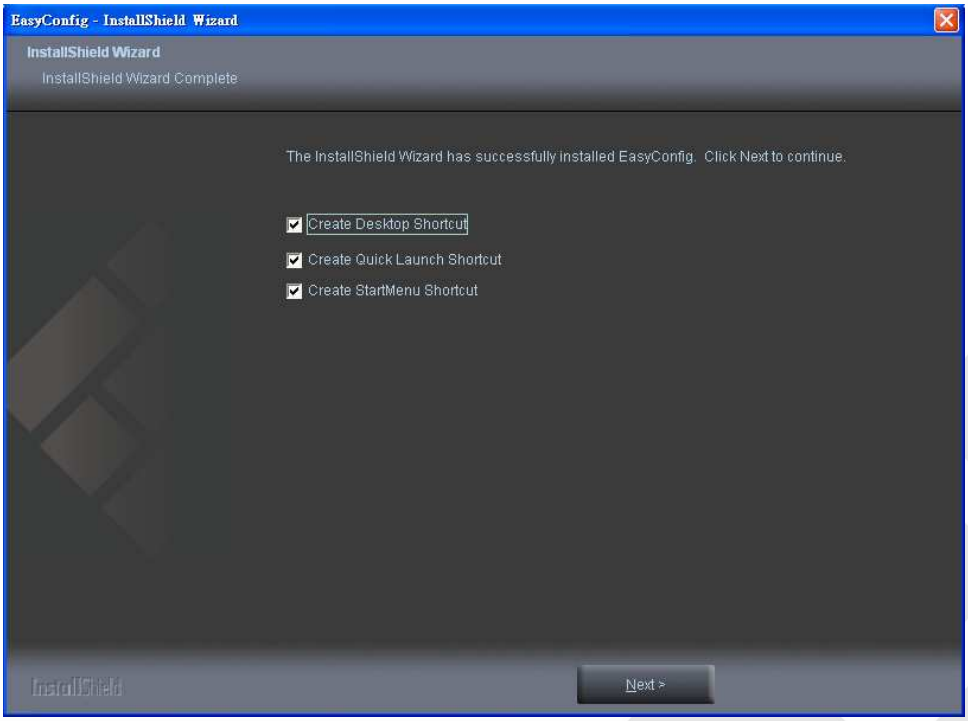

v. Select to create the PC-NVR Standard shortcuts. Click <Next> to continue.

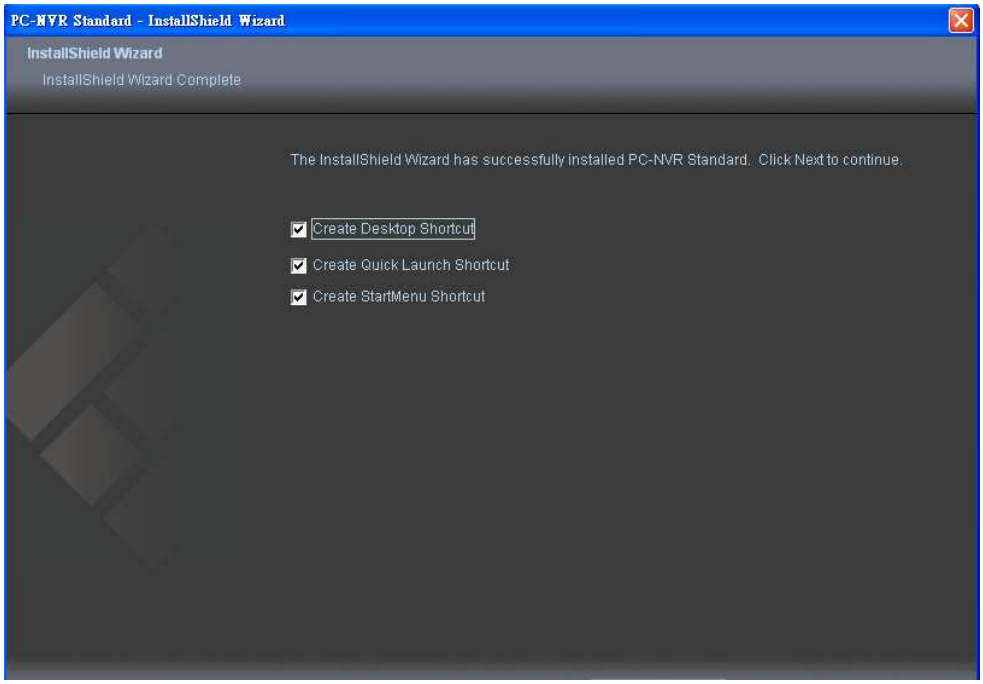
PC-NVR Standard - InstallShield Wizard
InstallShield Wizard
InstallShield Wizard Complete
The InstallShield Wizard has successfully installed PC-NVR Standard. Click Next to continue.
Create Desktop Shortcut
Create Quick Launch Shortcut
Create StartMenu Shortcut

vi. The installation information will be displayed. Click <Next> to continue.

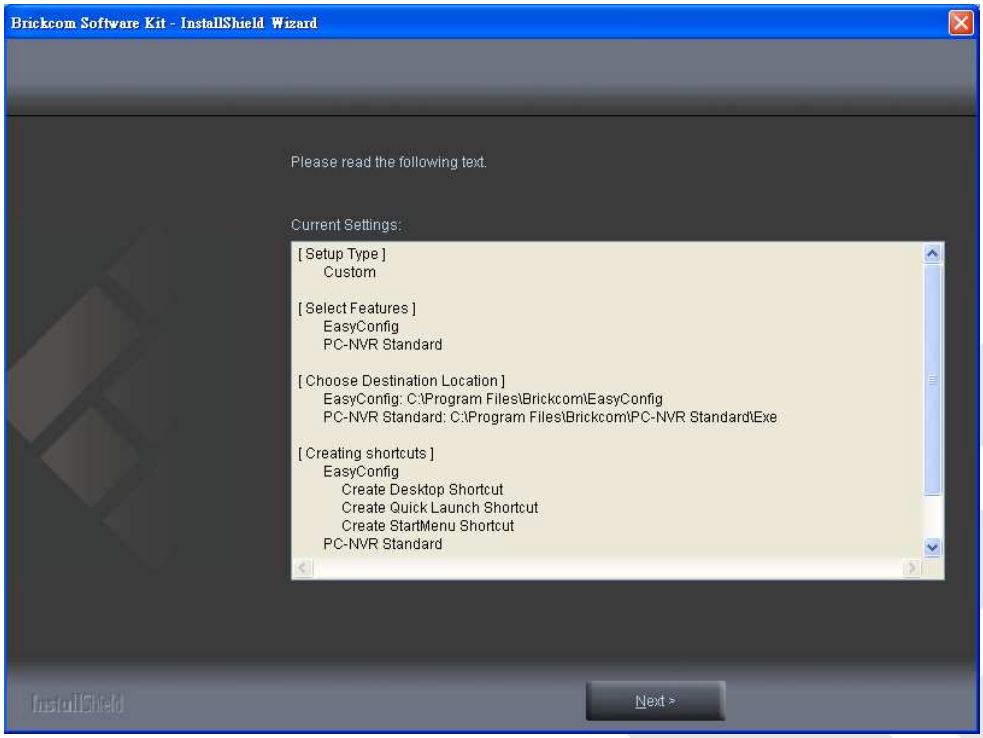

6. Select either EasyConfig or PC-NVR to launch. If the PC-NVR program is launched, please see page 20.

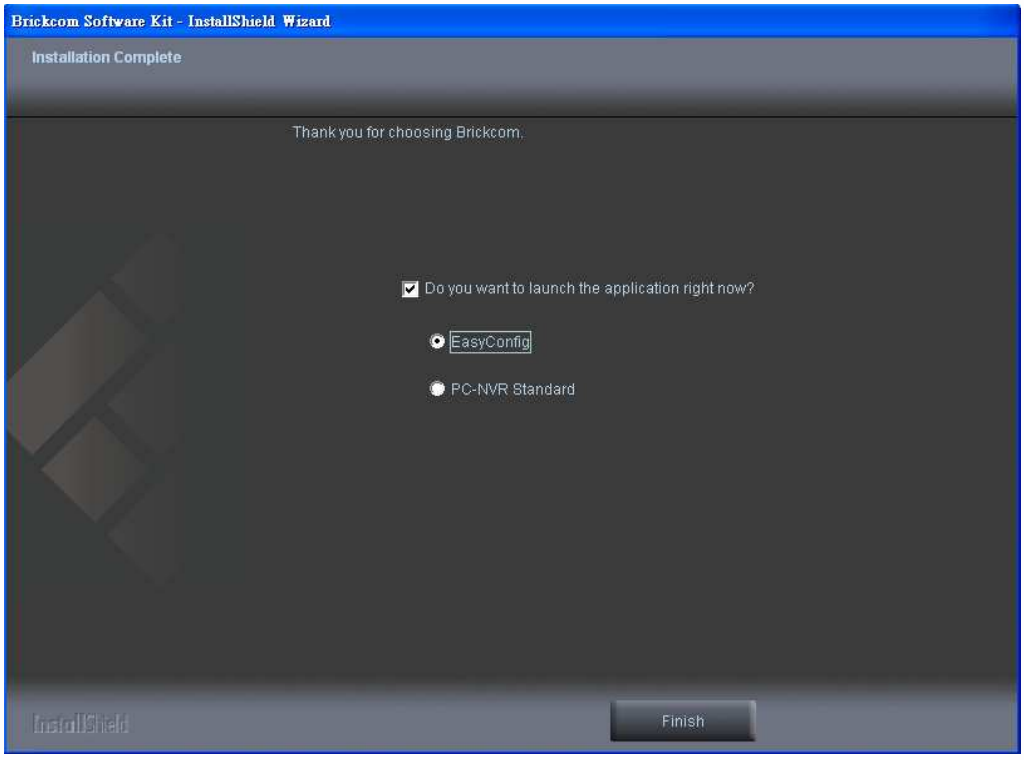

EasyConfig

To launch EasyConfig, select EasyConfig from the start menu. If complete setup type was used in software installation, an EasyConfig icon was installed on the desktop. Double click to open the icon.

If custom setup type was used in software installation and an EasyConfig icon was not installed on the desktop, the program should be installed under C:\Program Files\Brickcom\EasyConfig unless the program was saved to a preferred directory.

1. Click <Start> to continue. The program will automatically search for the network camera in the intranet.

Note: Check <Skip the hardware installation guide> to skip the hardware connection checking. If the user wants to check the hardware installation settings, do not check the option box.

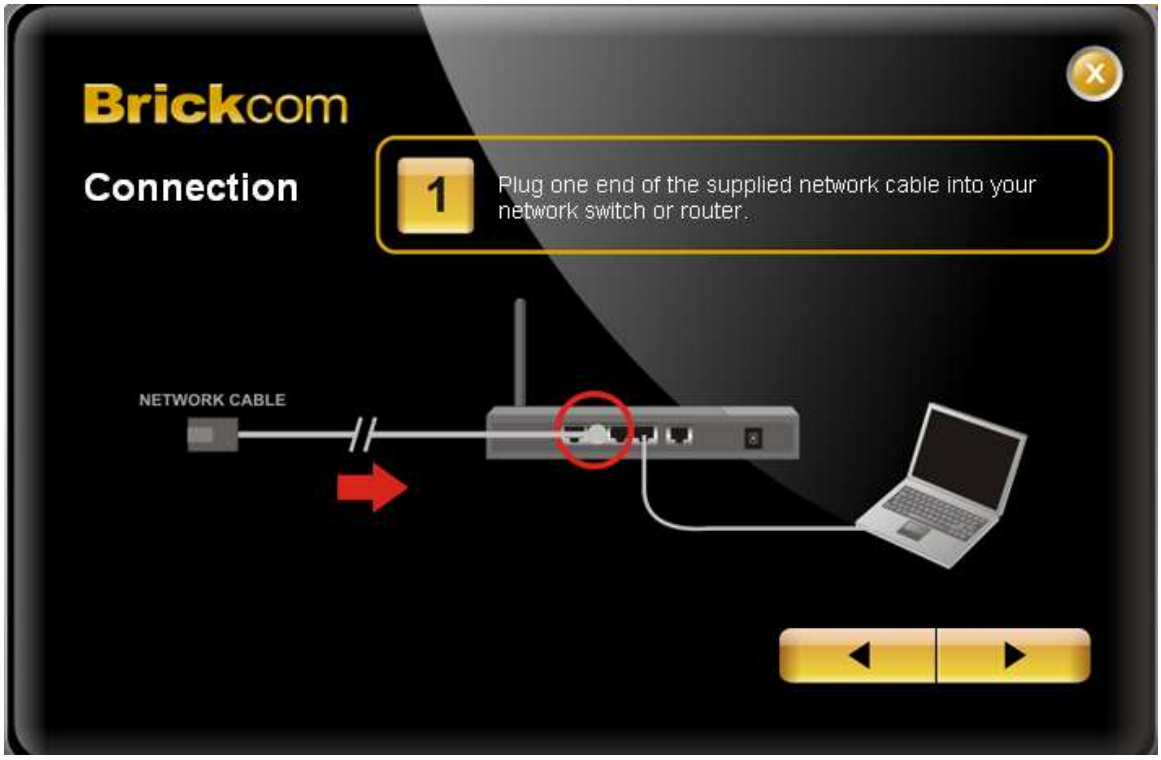
Brickcom
Connection
1
Plug one end of the supplied network cable into your network switch or router.
NETWORK CABLE

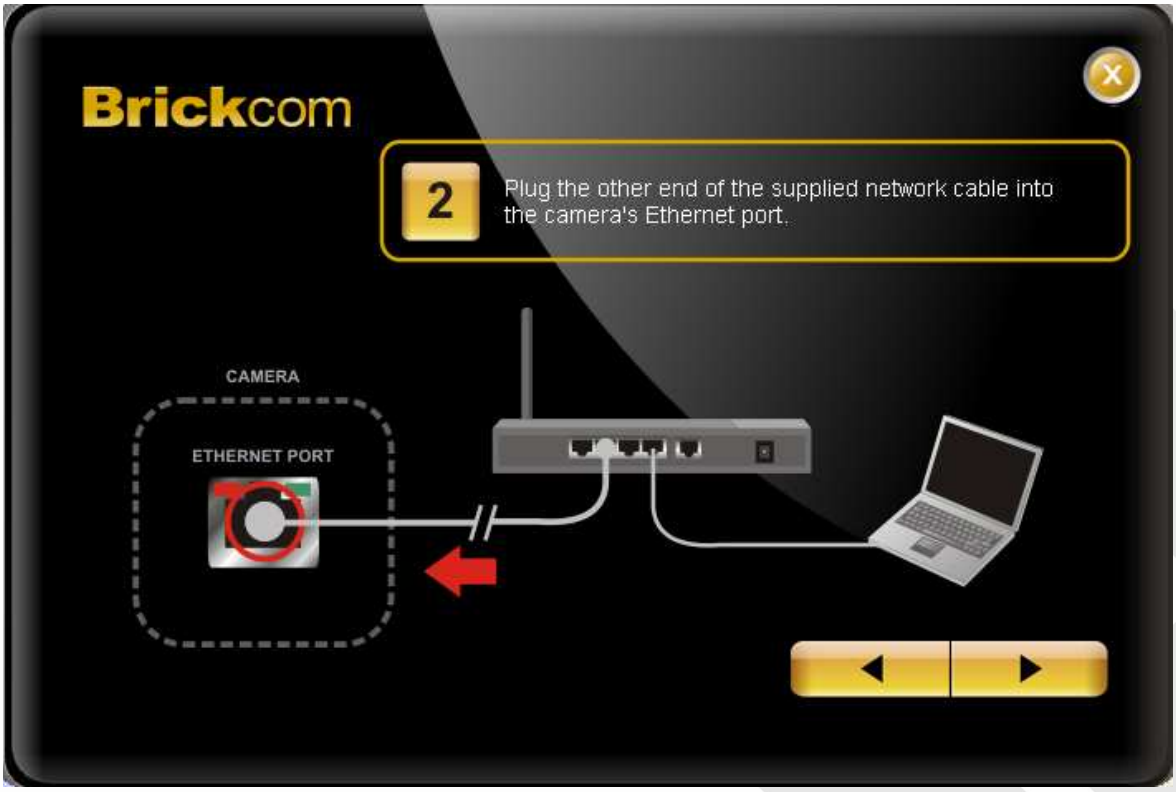
Brickcom
2
Plug the other end of the supplied network cable into the camera's Ethernet port.
CAMERA
ETHERNET PORT

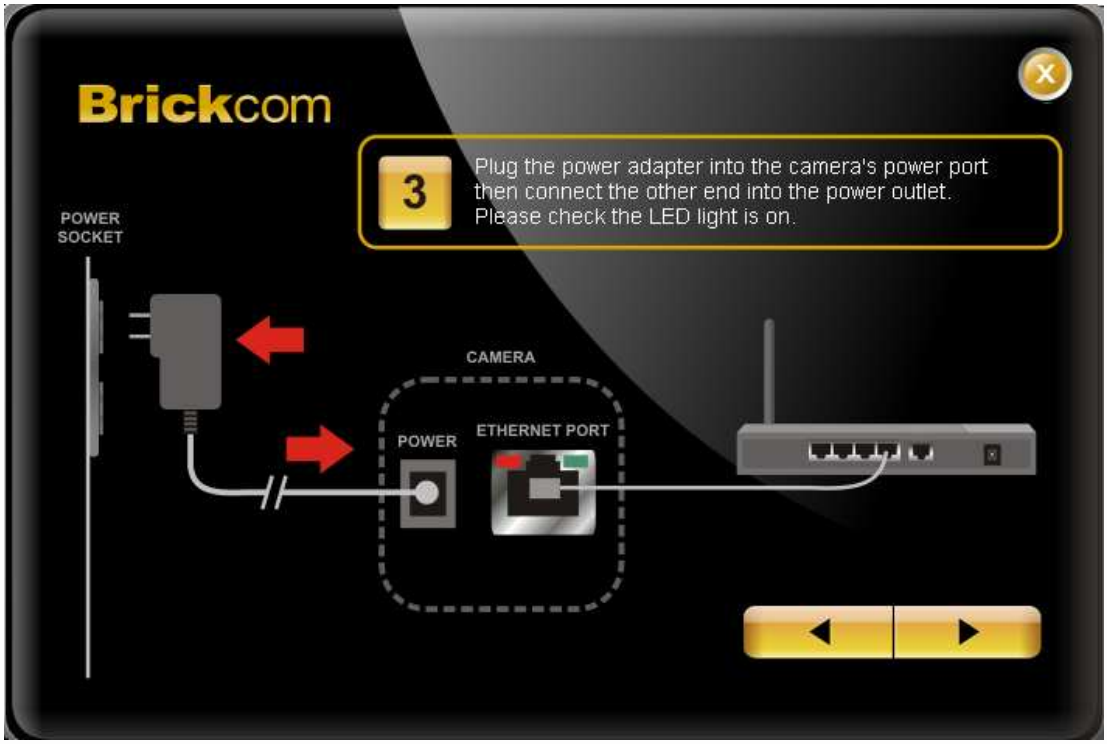

2. The user can either select simple mode or professional mode for the network camera IP setting. If the simple mode is selected, the easy configuration program will set up the connection automatically. If the professional mode is selected, the user will need to configure the IP manually.

Brickcom
If simple mode is selected, the easy configuration program will set up the connection automatically. If professional mode is selected, the user will need to configure the IP manually, the DHCP setting is recommended. If user wants set IP address manually, please refer to the product user manual.
Simple Mode
Professional Mode

3. There may be many Network Cameras in the local network. The user can differentiate the Network Cameras with the UPnP name. Double click on the desired Network Camera from the survey list to connect.

4. Enter the username and password of the camera. For first time use, the default username and password are assigned as "**admin/admin**."

5. For selecting the IP address settings, the user can either select <Settings remain the same>, <Automatically obtain an IP Address (DHCP)> or <Set IP Address configuration manually>. The DHCP setting is recommended. If the user wants to set the IP address manually, please refer to the product user manual.

Brickcom
Select the IP Address settings.
Settings remain the same
Automatically obtain an IP Address (DHCP)
Set IP Address configuration manually

a. If <Set IP Address configuration manually> is selected, the following pages will be displayed.

Brickcom
Select the IP Address settings.
Settings remain the same
Automatically obtain an IP Address (DHCP)
Set IP Address configuration manually

Brickcom
Enter the Static IP Address to configure IP Camera.
IP Address
192 . 168 . 1 . 104
Subnet Mask
255 . 255 . 255 . 0
Gateway
192 . 168 . 1 . 1
DNS1
168 . 95 . 1 . 1
DNS2
192 . 168 . 1 . 1

6. **If the network camera supports the EasyLink™ function**, the following page **will be** displayed. Otherwise, this page **will not** be shown.

*Click <Skip> to skip this setting.

EasyLink™ enables network cameras to come with everything necessary to quickly add a surveillance camera to a home or small office network. To view what the camera is seeing, simply log on to mybrickcom.com, choose the device's domain name which was created by the user, and start viewing. There is no need to configure the router to open up ports or remember hard-to-memorize Internet addresses.

As a mybrickcom-enabled device, the camera can be accessed anytime, anywhere by simply logging on to the mybrickcom website and selecting the camera.

Check the option box to enable EasyLink™. Enter a domain name whose length must be between 5-32 characters.

For Refresh Time, select a desired amount of time from the drop-down menu to confirm the connection status.

When finished, click the arrow button to continue.

7. When the IP address settings have been made, the screen will either display a successful or failed connection message. If the connection failed, the user can either try again or quit the installation.
    a. If the DHCP IP address setting was selected, the failure page will be displayed as below:

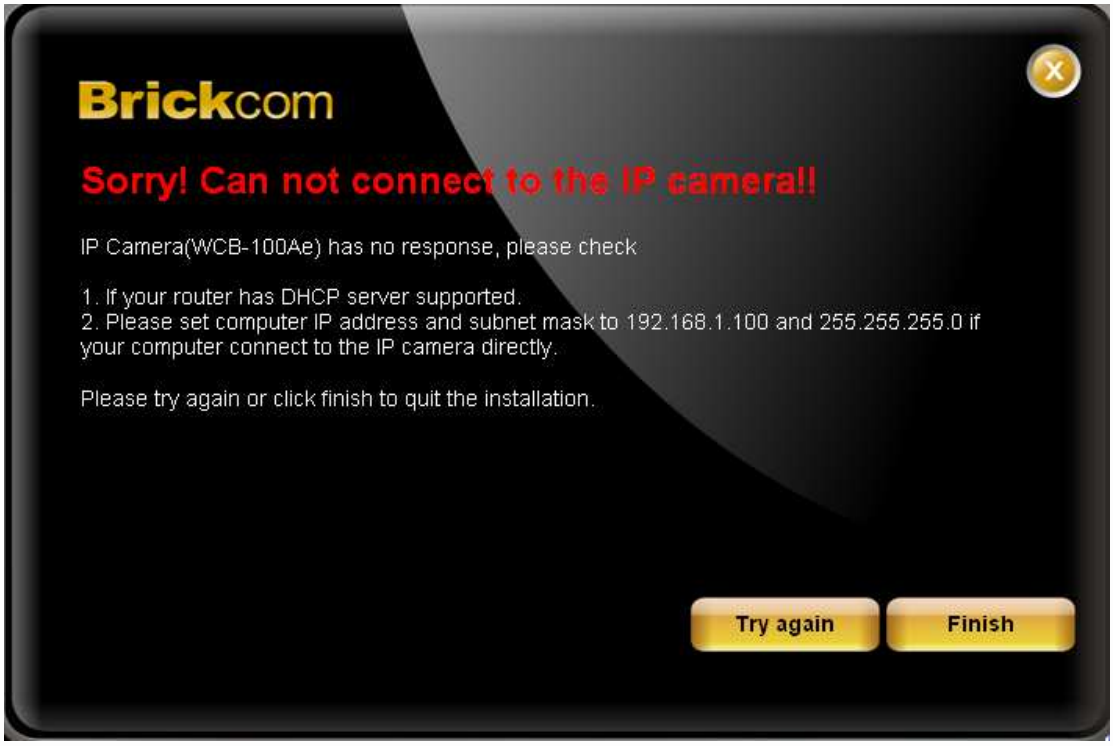
Brickcom
Sorry! Can not connect to the IP camera!!
IP Camera(WCB-100Ae) has no response, please check
1. If your router has DHCP server supported.
2. Please set computer IP address and subnet mask to 192.168.1.100 and 255.255.255.0 if your computer connect to the IP camera directly.
Please try again or click finish to quit the installation.
Try again
Finish

    b. If the Static IP address setting was selected, the failure page will be displayed as below:

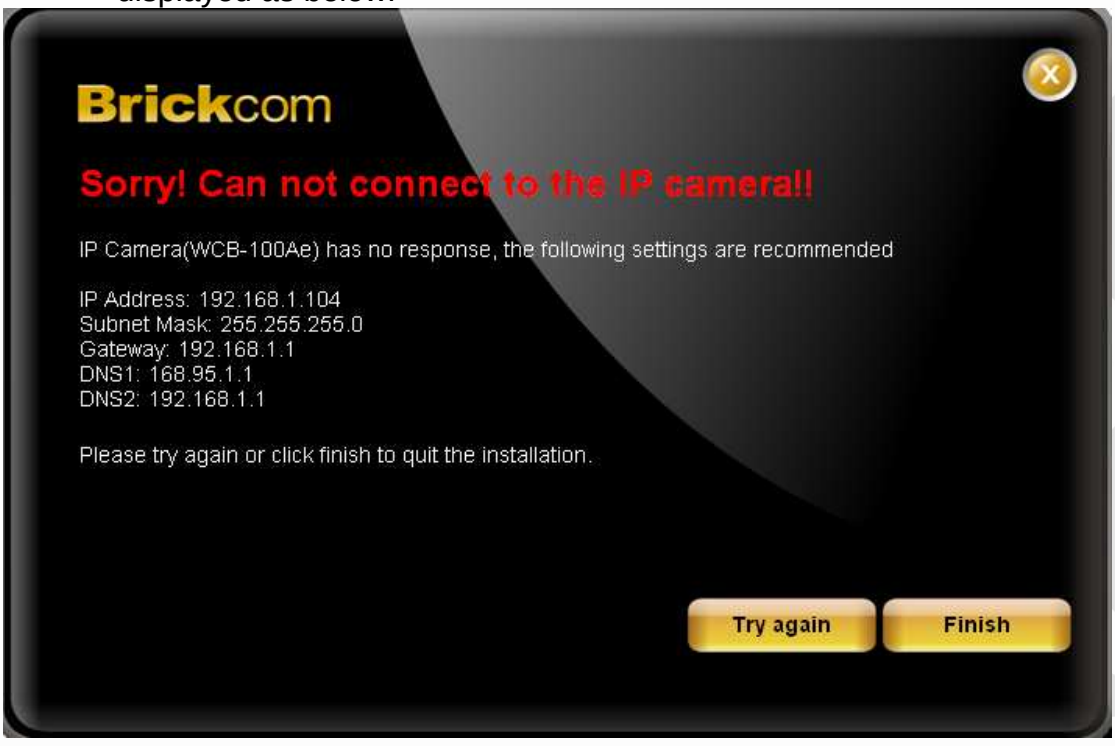
Brickcom
Sorry! Can not connect to the IP camera!!
IP Camera(WCB-100Ae) has no response, the following settings are recommended
IP Address: 192.168.1.104
Subnet Mask: 255.255.255.0
Gateway: 192.168.1.1
DNS1: 168.95.1.1
DNS2: 192.168.1.1
Please try again or click finish to quit the installation.
Try again
Finish

c. If the connection was successful, the user will see the message: Congratulations, the installation of the camera is complete.

When this window is displayed, the user can click <X> in the top right corner of the screen to close the installation window, click <PC-NVR> to start the PC-NVR program or, click <Live View> to view the live video from the connected IP camera. If the user starts the PC-NVR program, see page 20.

Start with PC-NVR

To launch PC-NVR Standard, select PC-NVR Standard from the start menu. If complete setup type was used in software installation, a PC-NVR Standard icon was installed on the desktop. Double click to open the icon.

If custom setup type was used in software installation and a PC-NVR Standard icon was not installed on the desktop, the program should be installed under C:\Program Files\Brickcom\PC-NVR Standard/ PC-NVR Standard unless the program was saved to a preferred directory.

1. For first time use, the user name and password are assigned as "**admin/admin**". Click <OK> to login.

*Check <Save user name and password> to save time when the PC-NVR starts.

Main Window

The usage and function of each button will be briefly described below:

Click this button to search for UPnP devices within the LAN.

Volume increase/Volume decrease

Volume on/off

Live View - Click on the <Live View> icon to view live video feed. **Note:** After viewing recorded video, click this button to return to the live mode.

Setting - Click on the <Setting> icon to adjust the camera, file path, event, sequence, and login settings.

Schedule record - Click on the <Schedule record> icon to schedule recording times for cameras on the network.

Playback - Click on the <Playback> icon to view recorded video stored in the HDD of the connected IP camera.

Event - List of system and camera event logs.

Snapshot - Click on the <Snapshot> icon to save a snapshot of the current window(s).

Emap - Click on the <Emap> icon to open the E-Map program. The E-Map is a program that allows the user to illustrate the positions of the cameras on a self selected image.

Lock - Click on the <Lock> icon to lock the PC-NVR without closing the program. To re-access the PC-NVR, the user will be prompted to enter the username and password.

Display Modes


2X2


3X3


4X4

8 division


10 division

13 division

5X5

6X6

7X7

8X8

Sequence

Full Screen

Resort Camera

Display Modes: to view the image in a multiple window mode. The selections include 1-window, 4-window, 9-window, 16-window, 8-window, 10-window, 13-window, 25-window, 36-window, 49-window, and 64-window modes.

Sequence: This function is used to set the display sequence.

Full Screen: Enlarge the viewing window to fit full screen. Hit <Esc> to exit.

Resort Camera: Resort Display Window Grids; to rearrange camera images of connected sites in order.

Configure the PC-NVR

Live View

With the live view function, the user can view live video feed from any IP camera connected to the network. To operate this feature:

1. Click on the <Live View> button to see the live view. Right click on a desired grid and select < Disable Live View > from the pull down menu to disable live view.
2. Click <UPnP Search> button on the control panel to start searching for UPnP devices within the LAN.
3. Use the Display Modes to determine the amount of sites to view
4. The PC-NVR allows the user to assign any camera in the site tree to any grid in the main window.

   Step 1: Selects the camera to be viewed from the site tree.

   Step 2: Drag and drop the selected camera into the window to view.

Re-sort Camera

If the user rearranges the camera sites during live view, they can return to the original camera order by right clicking on any grid square and selecting <Re-sort camera>.

Setting

With the setting function, the user can manage up to 64 camera sites on the PC-NVR. It includes adding, removing or configuring cameras.

Add/Remove a Site

There are two ways to add a site.

1. **Setup the Site via UPnP Device Search**

   a. Click <UPnP Search> button on the control panel to start searching for UPnP devices within the LAN.

b. Click and select the Network Camera from the survey list. Enter the user name, password and select the stream type from the drop-down menu. For first time use of an IP camera, the user name and password are “**admin/admin**”.

Brickcom
Please double-click the camera you want to connect to incorporate it into the PC-NVR.
No.
UPnP Name
IP Address
MAC Address
Model Na...
Firmware
Connected
1 FB-100Ap-Poca 10.5.42.48 00:26:82:1b:db:17 FB-100Ap 100 Already in the list
2 WFB-100Ap-4411 10.5.42.15 00:11:22:33:44:11 WFB-100Ap v3.0.0.3
3 WCB-100A-Poca 10.5.42.110 00:26:82:59:2e:fd WCB-100Ap 100 Already in the list
4 FB-100Ap-db79 10.5.42.107 00:26:82:1b:db:79 FB-100Ap 100 Already in the list
5 WCB-100Ap-2fab 10.5.42.7 00:26:82:59:2f:ab WCB-100Ap v3.0.0.3
Search again

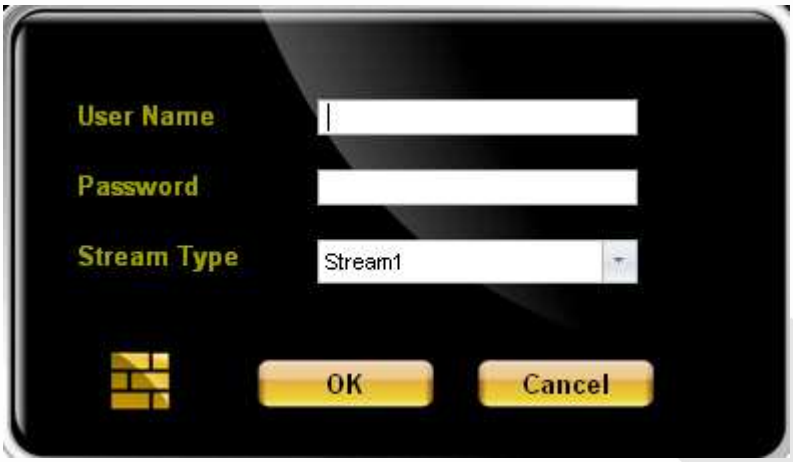

Setup the Site Manually

a. Click on the <Setting> icon and the figure below will be displayed.

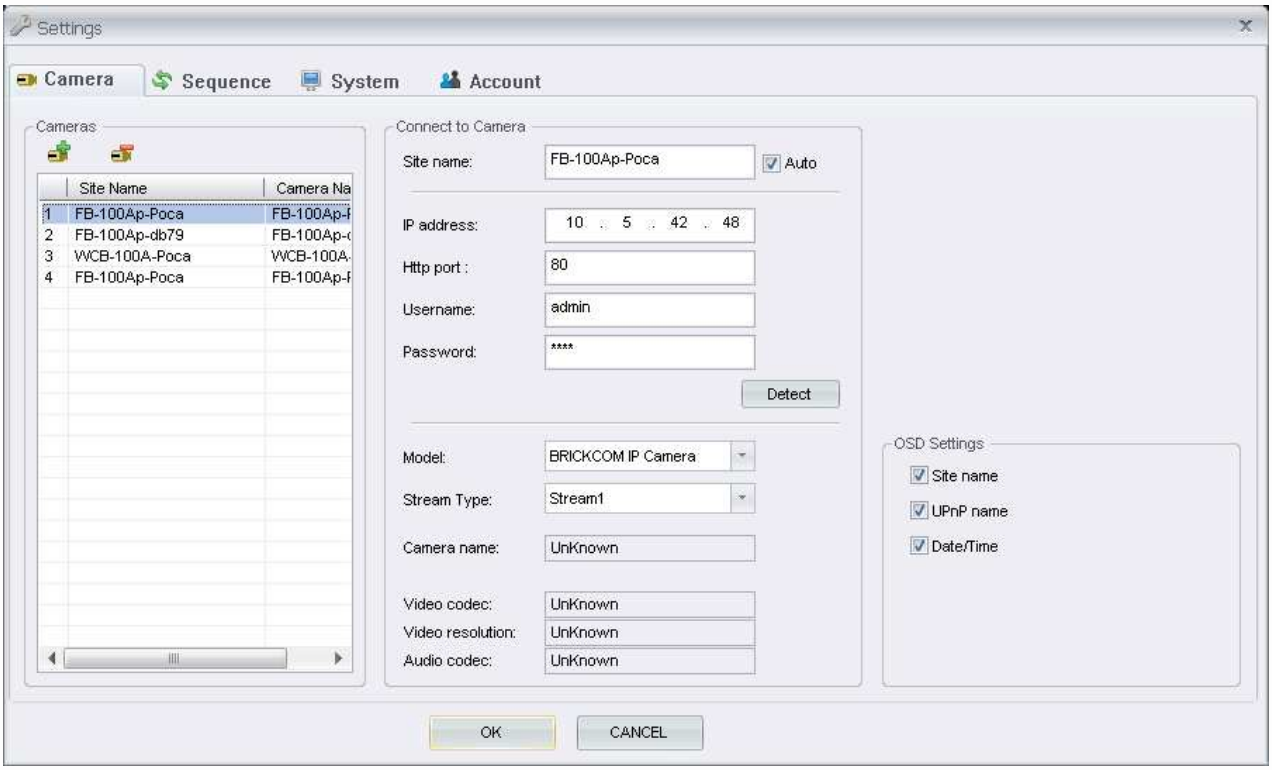

b. Click button to add a site. Click to remove it.

To add an IP Camera to the PC-NVR, enter the required information, including the Site name, IP address, Http port, Username, and Password of the IP Camera. Click <Auto> to automatically retrieve the Site name from the UPnP name of the camera being added add to the PC-NVR. Select the <Model> and <Stream Type> of the IP Camera from the drop-down menu. Click <detect> to check connectivity and information of the IP camera. Click <OK> to complete the setting.

OSD Settings

“On-screen display” displays the camera data, which includes site-name, UPnP name and Date/Time, of a connected IP camera on the live view screen. Click to select the options on the camera setting page or right click on a desired grid and select < OSD setting > from the pull down menu.

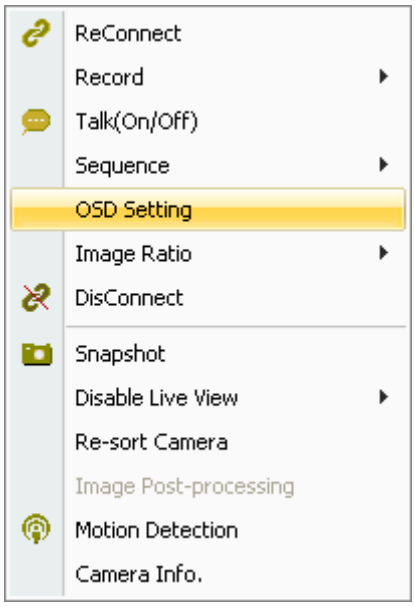

Sequence

This function is used to set the display sequence for live view of the cameras. There are two ways to add cameras to the sequence.

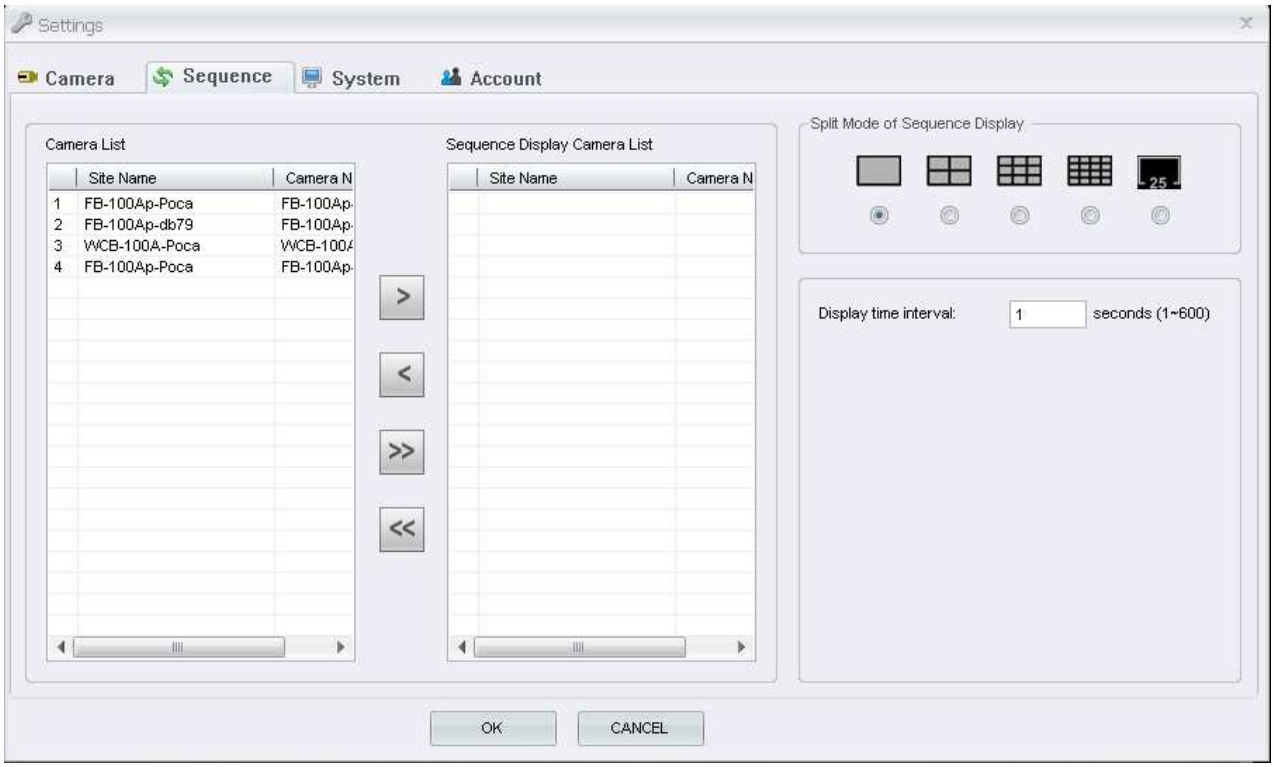

1. Click on the <Setting> icon and choose <Sequence> to setup the sequence. Select a camera and move from the "Camera List" to the "Sequence Display Camera List" in the preferred sequence order. The user can setup the display time interval (from 1 to 600 seconds) and split mode of sequence display (2*2, 3*3, 4*4, 5*5, 6*6). Click <OK> to save the settings.
2. Right click on a desired grid and select <Sequence> → <Add to Sequence> to add, or <Remove from Sequence> to remove. Note that when the sequence is added, a capital "S" will be shown on the icon.

System

Record Path

The file path menu defines the storage located of recorded videos and snapshot. It is recommended to use the default folders.

- <C:\Program Files\Brickcom\PC-NVR Standard\Record> is the default path for recorded videos.

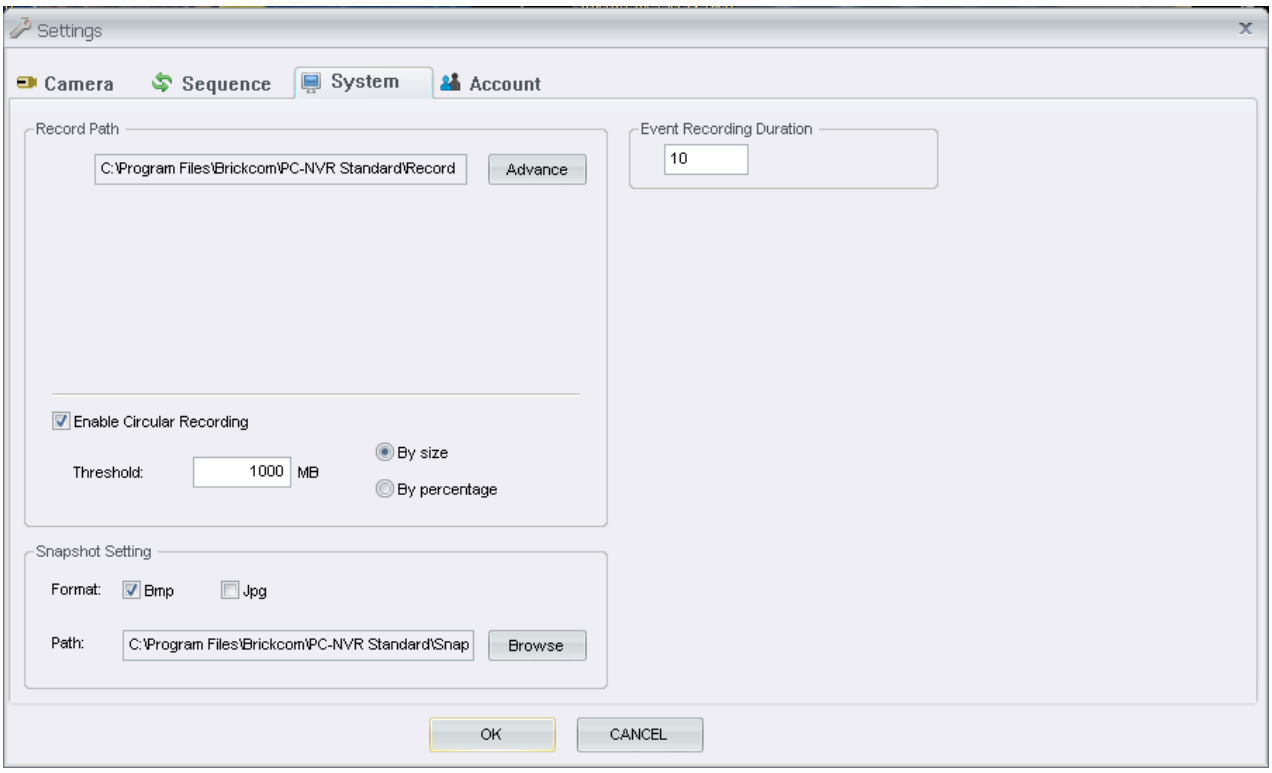

The recorded videos can be stored in more than one folder. Click on <Advance> and the following window will be shown.

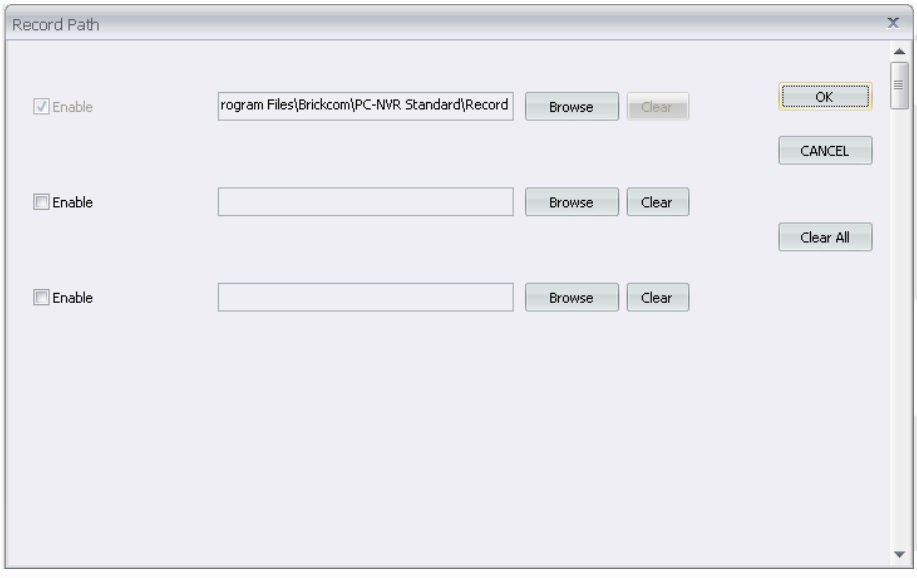

Check the “Enable” box and click <Browse> to set more destination folders. Click on <Clear All> will delete all folders except the first destination folder.

When motion detection is enabled, the Event Recording Duration can be used to define the amount of time for post-event recording. The duration must between 10 seconds to 600 seconds.

Circular

The “Circular” is used to adjust the HDD space usage of the PC-NVR. If ”Circular” is enabled, then once the free space remaining in the destination folder falls below the threshold, the “Circular” will overwrite the oldest video and snapshot files in the storage folder with new videos and snapshots files. The user can adjust the threshold by megabytes or percentage of the file size.

Snapshot Setting

<C:\Program Files\Brickcom\PC-NVR Standard\Snapshot> is the default path for snapshots.

Click <Browse> to set desired destination folder as shown below. If the boxes are checked to save snapshots as Bmp and Jpg, the snapshots will be saved to two folders: one for Bmp and one for Jpg.

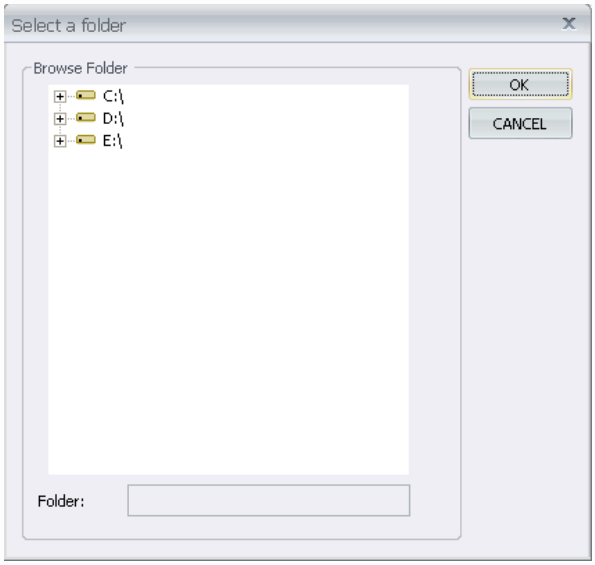

Account

Account is for the administrator management of the PC-NVR. The default username and password are set as "**admin/admin**". The user can only edit login setting using the administrator username and password. To change the password, the user must enter the user name, current password, new password, and confirm password. Click <Apply> once the information is entered.

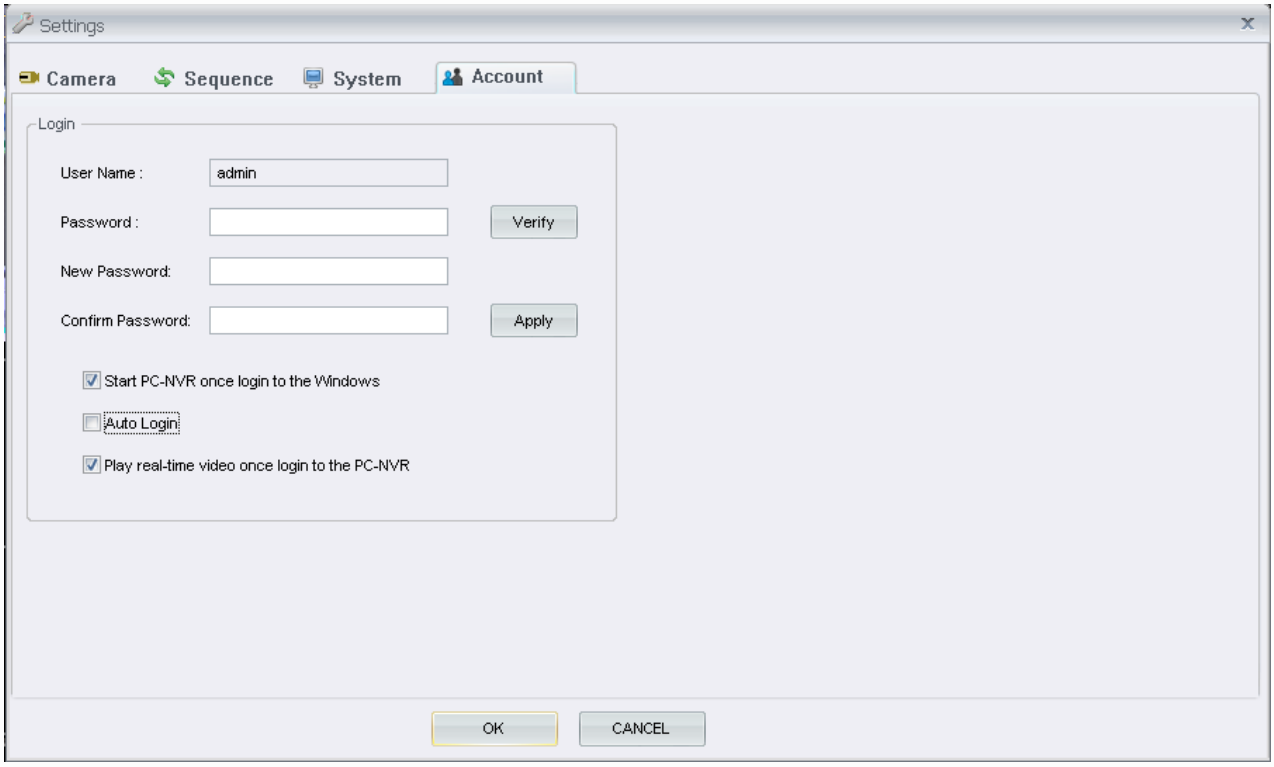

Login

The user can click the option "Start PC-NVR once login to the Windows" to request the computer to open the PC-NVR when Windows is opened.

The user can click "Auto Login" to automatically login when the PC-NVR starts. To use this option, the user needs to verify a user name and password.

The user can click the option "Play real-time video once login to the PC-NVR" to automatically begin viewing live feed from the camera sites in the start group when the PC-NVR opens.

Click <OK> to save the settings.

Schedule Record

Click on the <Schedule record> icon and the figure below will be displayed.

The user can schedule specific times for the camera to record videos.

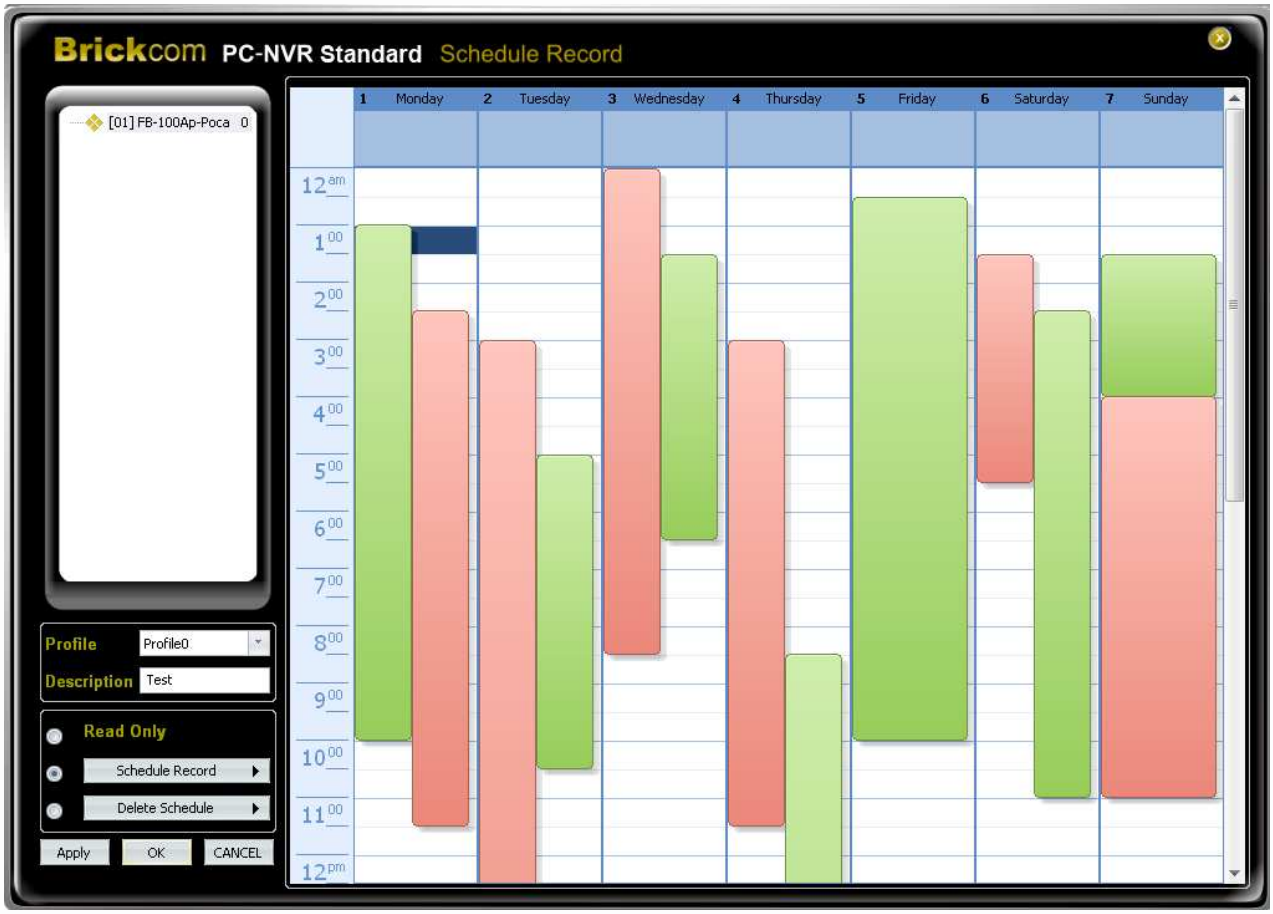

To create a recording schedule for a camera:

1. Select the desired camera
2. Select a profile from the “Profile” drop-down menu. Enter a description for the profile. **Note**: When a profile is created, it can be used by other cameras by repeating step one and choosing the desired profile.
3. Click and drag the mouse on the time frame table to schedule specific times for the camera to record video. **Note:** When the sites are being recorded, a will be displayed on the live view display window of the site.
4. When the user has finished creating a recording schedule for the desired camera, click <Apply> to save and continue using the schedule record setting for other cameras or click <OK> to save and exit the Schedule Record.
5. Recorded files will be saved to the default folder “\PC-NVR Standard\Record\”.

Read Only - Allows the user to read the schedule only.

Event Log

- **Select All Period**

Schedule will be set to record normal and event videos at all times.

- **Schedule Record**

Schedule to record only the normal videos within the selected time frame.

- **Event Record**

Schedule to record only the event videos within the selected time frame.

Delete Schedule

- **Delete One Period**

Select to manually clear the schedule setting.

- **Delete All Period**

Select to clear all the schedule settings.

Click <Apply> to save and continue using the Schedule Record setting or click <OK> to save and exit the Schedule Record.

Instant Record

While the videos are scheduled to record, the user can choose to instantly record live video clips. Right click on a desired grid and select <Start Recording> to start recording and <Stop Recording> to stop recording.

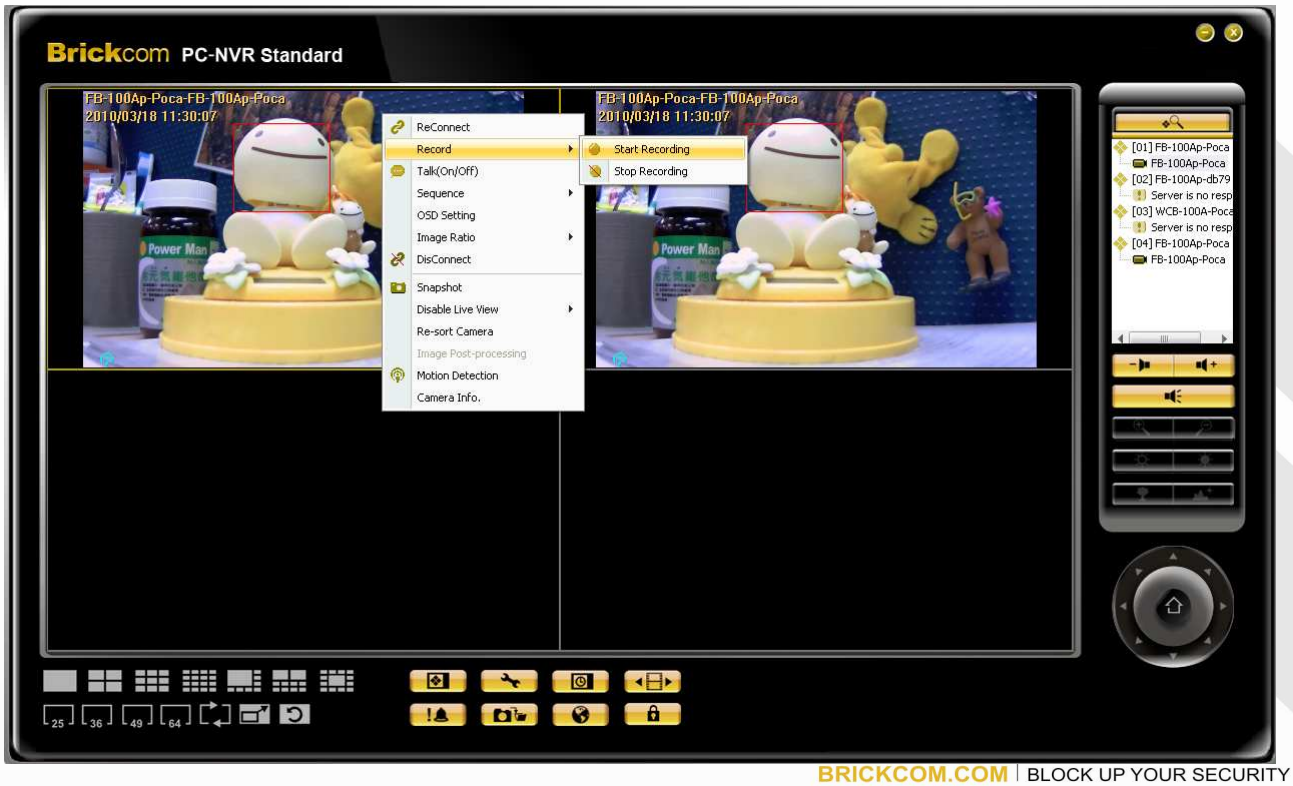

Adjust the display size

The user can adjust the display size of the Live View window by right clicking on the window to display the camera control menu. Select <Image Ratio> to adjust the size. The image ratio include: Original, Fit, Original all, and Fit all.

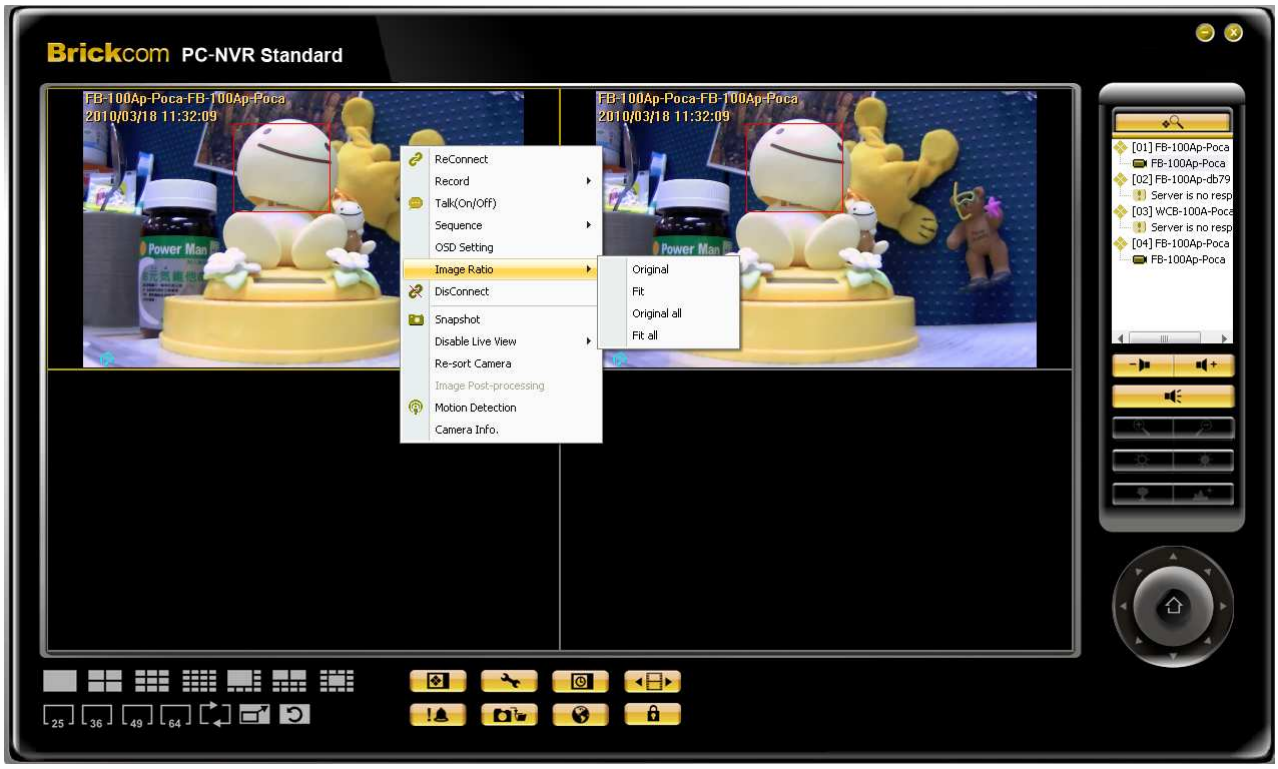

Motion Detection

Users can setup a camera to record motion detection at any site. Right click on a desired grid and select <Motion Detection> from the pull down menu.

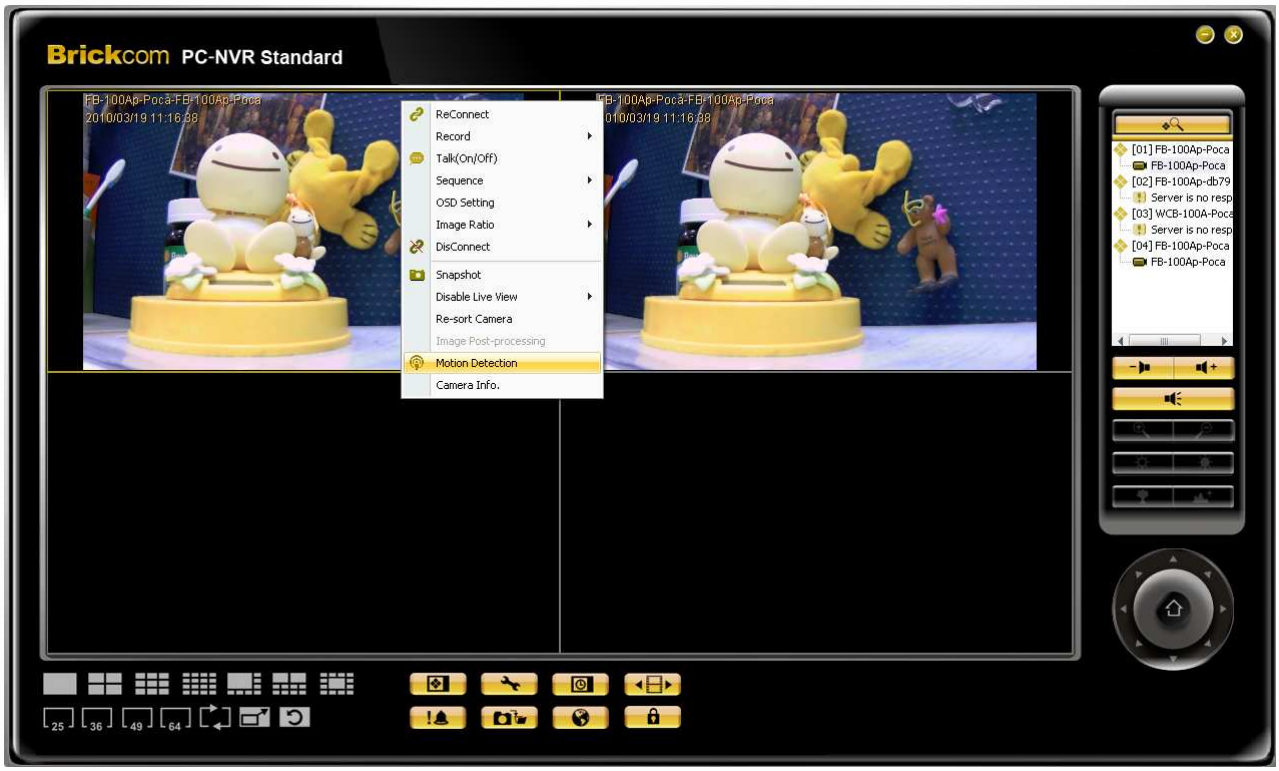

The motion detection settings window is shown below. Under “Detection Region,” users can click <ALL> to monitor the entire screen or click <Regional> to monitor up to eight individual regions. A blue grid will appear on the screen and the user can adjust the size. To delete, select desired grids and click on the <Clear> button to delete all selected areas. Alternatively, right click on any selected area to delete it individually.

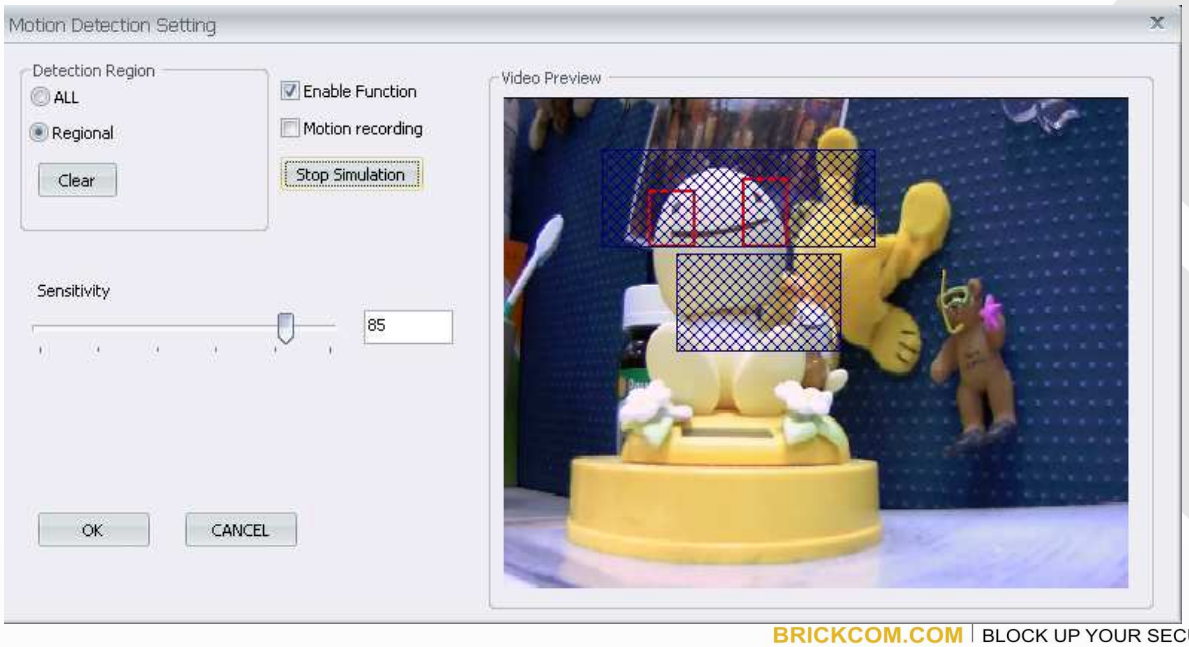

Enable Function - Check to begin monitoring motion detection.

Motion recording - Check to record an event video when motion is detected. The length of event video can be set by going to <Event Recording Duration> which is under System Setting.

Start Simulation - Click to simulate motion detection. As shown above, red boxes will mark when motion is detected in an area.

Stop Simulation - Click to stop the simulation.

Sensitivity - Setup a desired sensitivity level.

Click on <OK> to apply the settings, or click on <Cancel> to disregard and return to Live mode. The live monitoring screen will not show the blue boxes.

Camera Info

The Camera Info can be viewed in PC-NVR Standard. Right click on any desired grid and select <Camera Info.> from the pull down menu to view the information. Refer to the following for example:

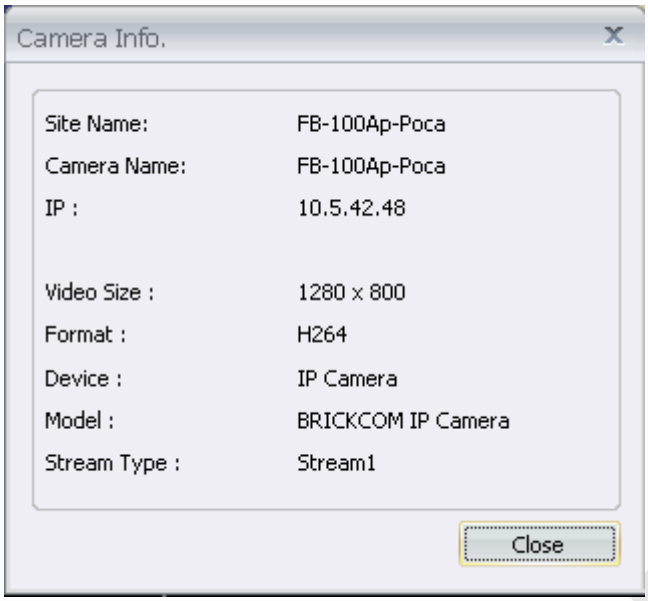

Playback

Click on the <Playback> icon, the figure below will be displayed. This function allows the user to retrieve and play videos stored on the HDD.

Backward/Play/Pause/Forward

Click on to start playing the video. To pause the video, press again.

Rewind

Click on to rewind the video.

Fast Forward

Click on to fast forward the video.

Volume increase/Volume decrease.

Volume on/off.

Open Image File

Click on the <Open Image File> icon to open video files. Users can double click on files in the list to start playback.

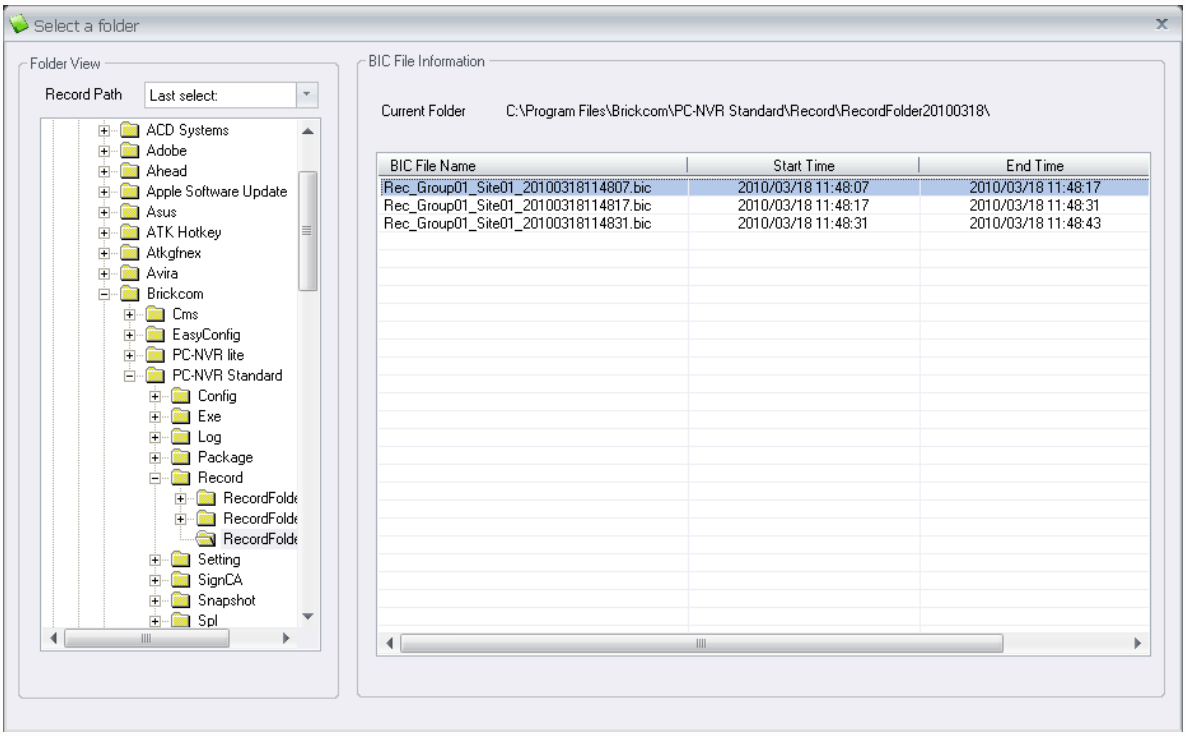

Search Image File

Click on the <Search Image File> icon to search for recorded files by date. Click the options to indicate normal and/or event video clips in the specific time frame.

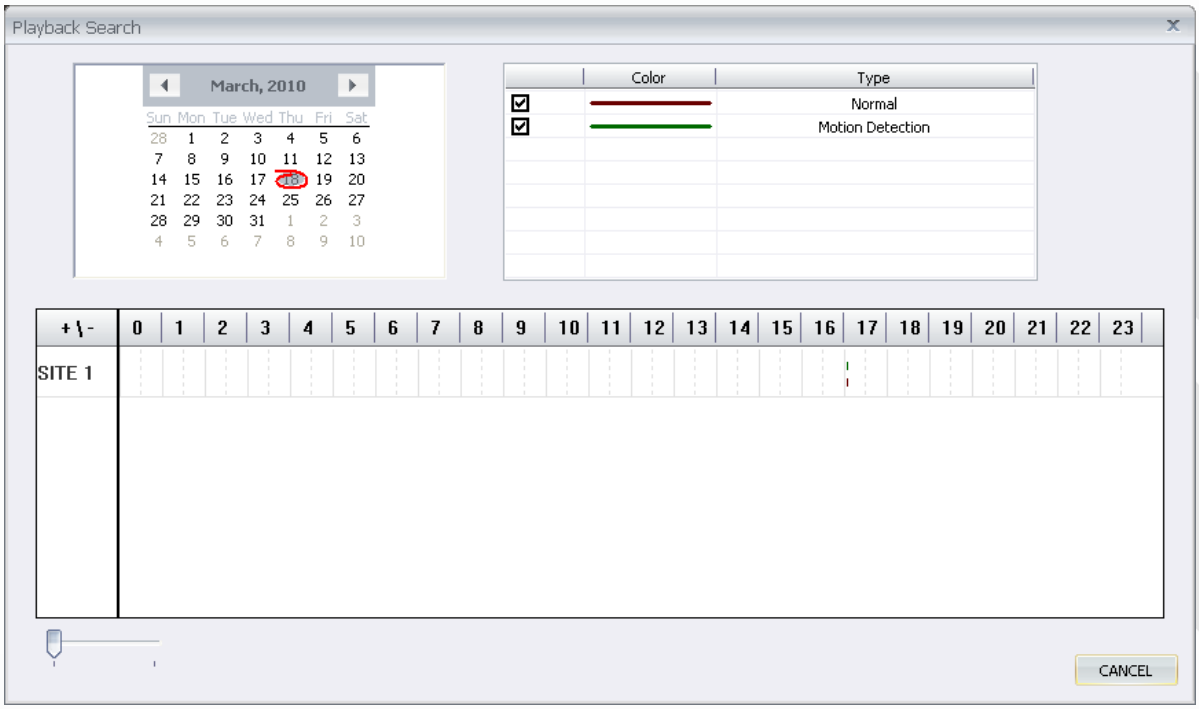
Playback Search
March, 2010
Sun Mon Tue Wed Thu Fri Sat
Color
Type
Normal
Motion Detection
+ \ -
0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23
SITE 1
CANCEL

Convert Image File

The <Convert Image File> icon is used to convert recorded video files to WMV video format. Click the icon to open the video files and select the files to be converted. Click <Convert> to start conversion of selected files. If the user wishes to stop the conversion, click <STOP> to abort.

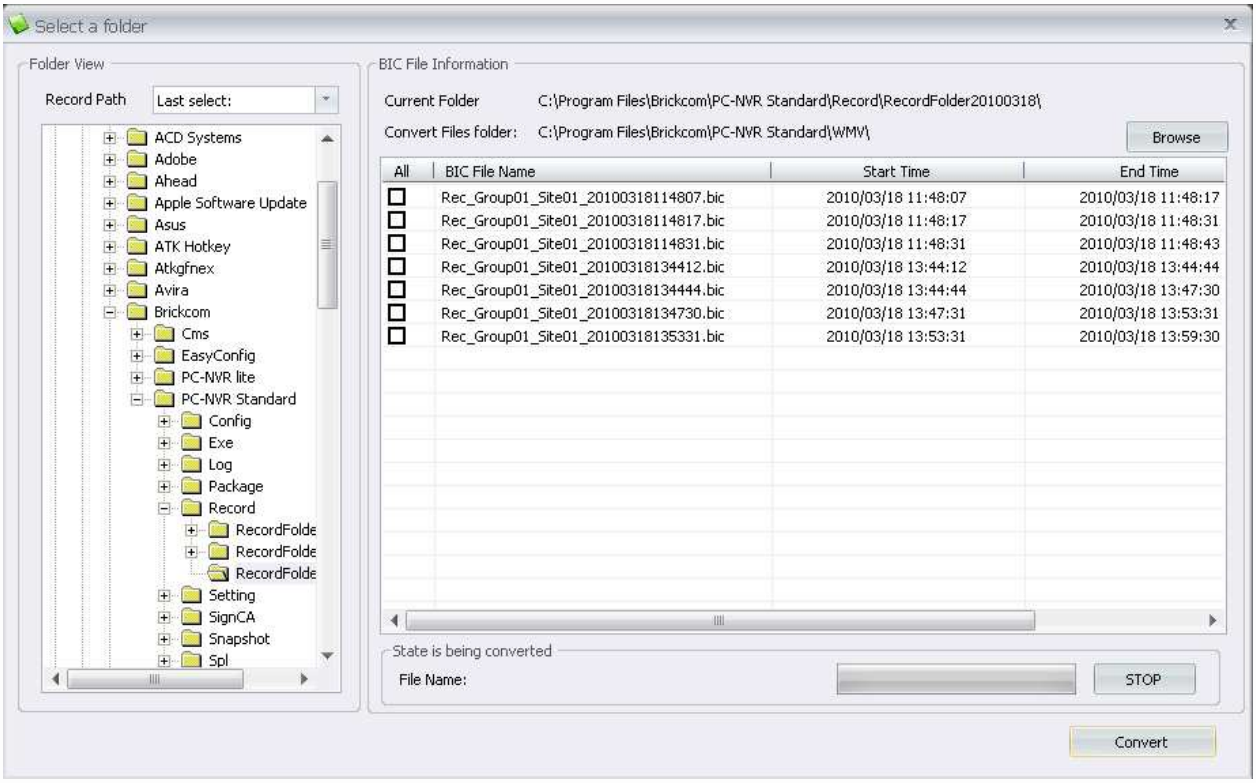

The converted files will be stored under folder C:\Program Files\Brickcom\PC-NVR Standard\WMV. To choose an alternate destination folder, click <Browse> and chose a desired folder.

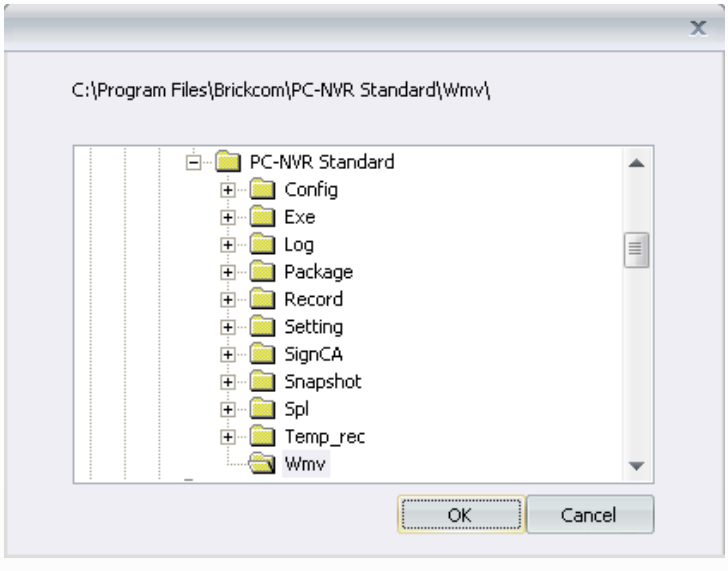

View Setting

Click on the <View Setting> to choose to show or hide the time on the playback video. Check <Show Time>, and the time will be shown on the screen. Uncheck to hide the information.

File Path determines where WMV conversion and snapshot files are saved on the computer HDD. Click on <Browse> to select desired folders. In addition, snapshot pictures can be saved using Bmp and/or Jpg formats. After the settings are selected, click <OK> to save.

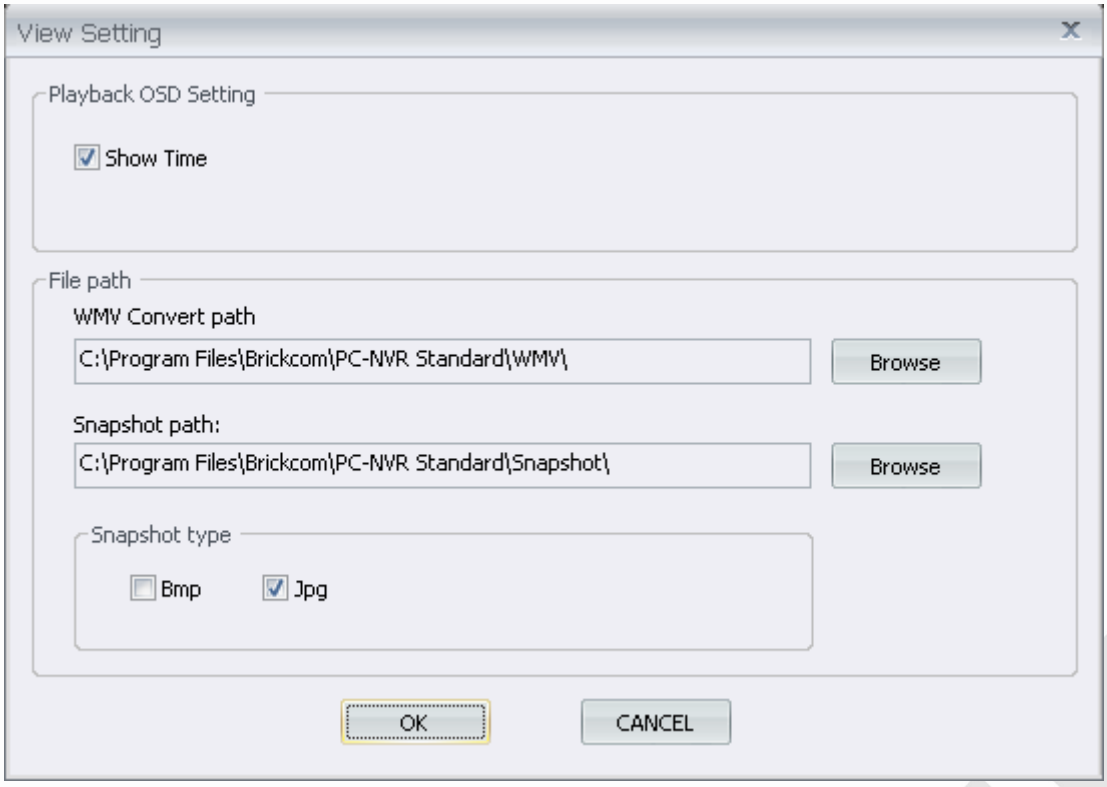

SnapShot

Click on the <Snapshot> to capture a snapshot of the playback screen. When the snapshot window is opened, the user can choose to rename the file or leave it as it is. Click on <OK> to save the snapshot or <CANCEL> to discard it.

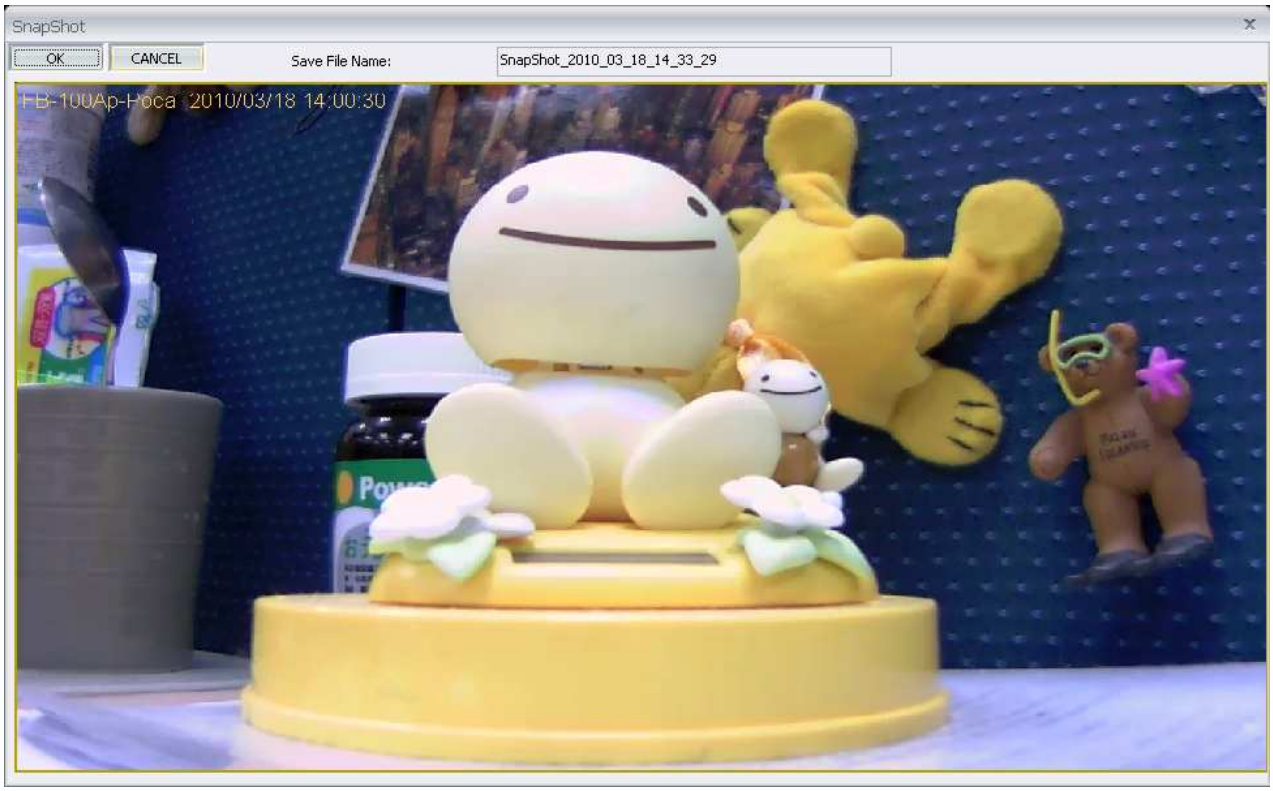

Event

Click on the <Event> icon to list all log and event activities of the camera.

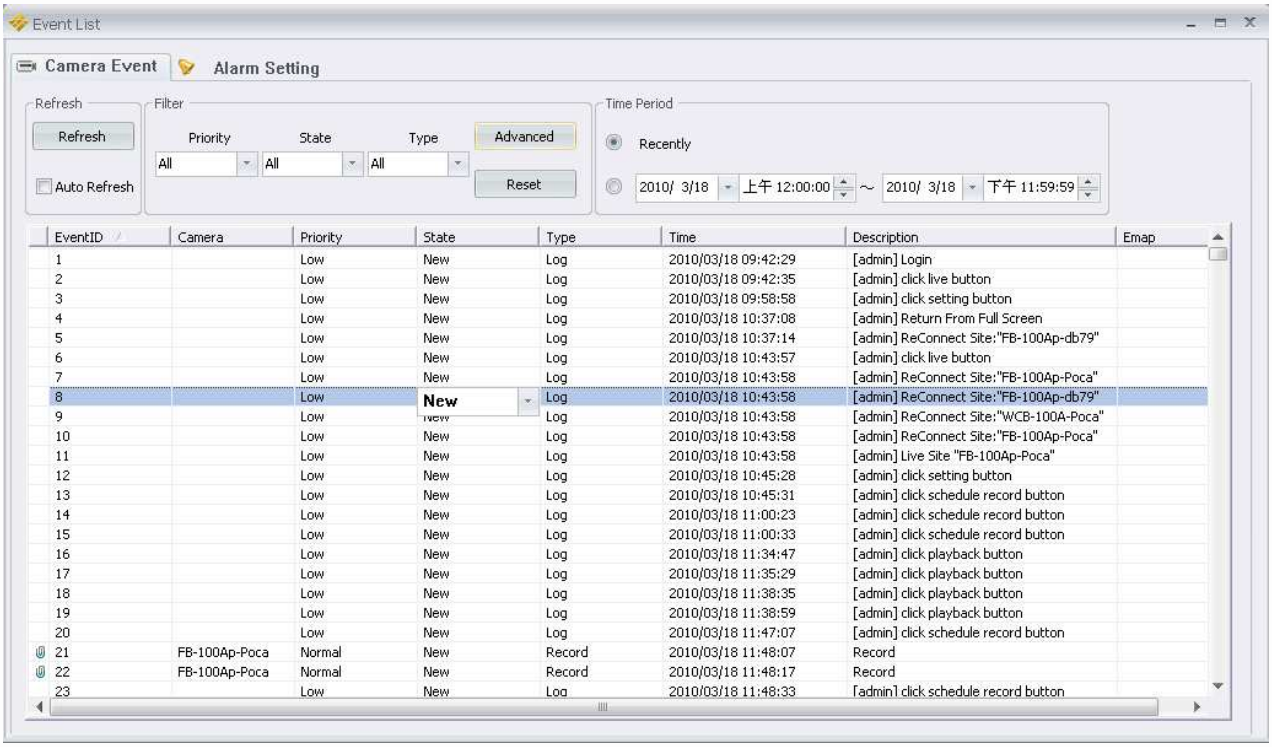
Event List
Camera Event
Alarm Setting
Refresh
Refresh
Auto Refresh
Filter
Priority
State
Type
All
All
All
Advanced
Reset
Time Period
Recently
2010/ 3/18
上午 12:00:00
~
2010/ 3/18
下午 11:59:59
EventID
Camera
Priority
State
Type
Time
Description
Emap
1 Low New Log 2010/03/18 09:42:29 [admin] Login
2 Low New Log 2010/03/18 09:42:35 [admin] click live button
3 Low New Log 2010/03/18 09:58:58 [admin] click setting button
4 Low New Log 2010/03/18 10:37:08 [admin] Return From Full Screen
5 Low New Log 2010/03/18 10:37:14 [admin] ReConnect Site:"FB-100Ap-db79"
6 Low New Log 2010/03/18 10:43:57 [admin] click live button
7 Low New Log 2010/03/18 10:43:58 [admin] ReConnect Site:"FB-100Ap-Poca"
8 Low New Log 2010/03/18 10:43:58 [admin] ReConnect Site:"FB-100Ap-db79"
9 Low Log 2010/03/18 10:43:58 [admin] ReConnect Site:"WCB-100A-Poca"
10 Low New Log 2010/03/18 10:43:58 [admin] ReConnect Site:"FB-100Ap-Poca"
11 Low New Log 2010/03/18 10:43:58 [admin] Live Site "FB-100Ap-Poca"
12 Low New Log 2010/03/18 10:45:28 [admin] click setting button
13 Low New Log 2010/03/18 10:45:31 [admin] click schedule record button
14 Low New Log 2010/03/18 11:00:23 [admin] click schedule record button
15 Low New Log 2010/03/18 11:00:33 [admin] click schedule record button
16 Low New Log 2010/03/18 11:34:47 [admin] click playback button
17 Low New Log 2010/03/18 11:35:29 [admin] click playback button
18 Low New Log 2010/03/18 11:38:35 [admin] click playback button
19 Low New Log 2010/03/18 11:38:59 [admin] click playback button
20 Low New Log 2010/03/18 11:47:07 [admin] click schedule record button
21 FB-100Ap-Poca Normal New Record 2010/03/18 11:48:07 Record
22 FB-100Ap-Poca Normal New Record 2010/03/18 11:48:17 Record
23 Low New Log 2010/03/18 11:48:33 [admin] click schedule record button
New

Camera Event

Click <Refresh> to refresh the list of events. The user can filter events two ways. The first is to use the three settings: priority, state, and type. The second is to filter using the "Advanced" settings. Clicks <Advanced> and the following menu will appear. The user can then select the filters for viewing the event list and click <OK> when done.

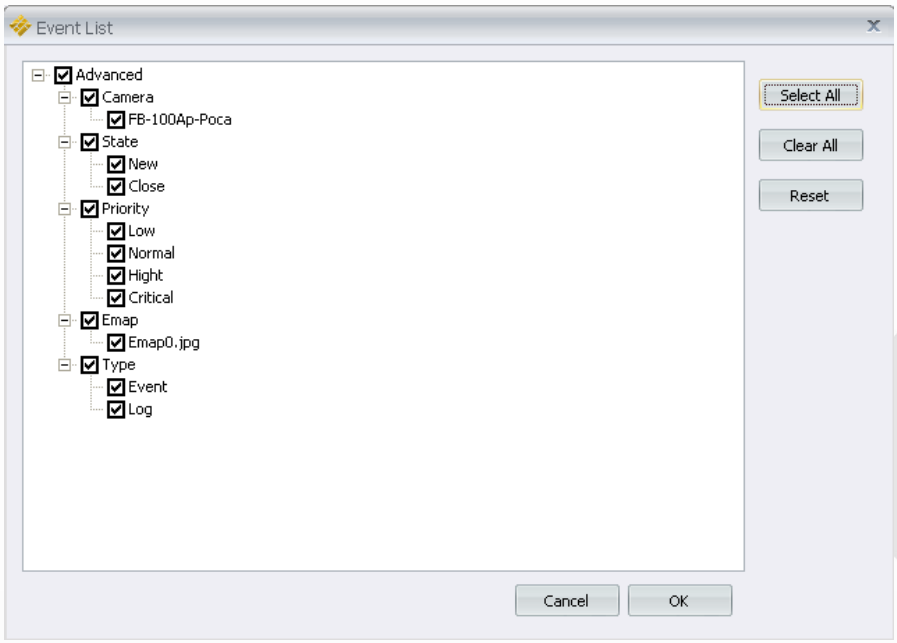

Under “Time Period,” users can choose to view events from the most recently recorded or a specific time period. The user can change the status of an event log by moving the mouse pointer over the <State> column. When appears, click to change the status of the log.

Alarm Setting

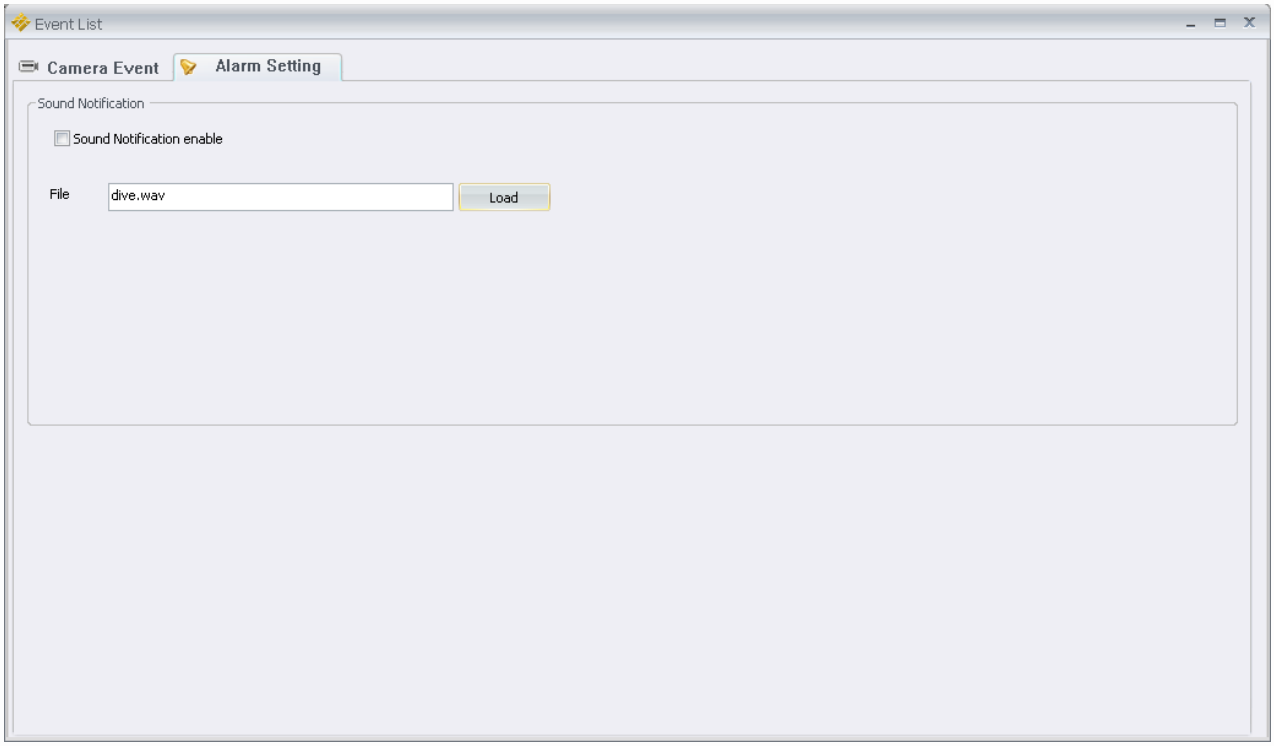

Click to enable the sound notification. Click <Load> to select a sound file to be played when an alert event occurs.

Snapshot

Click on the <Snapshot> icon to capture a screenshot of the window that you are currently viewing.

The Snapshot function is a simple screen capture tool. The screenshots are saved to the default path <C:\Program Files\Brickcom\PC-NVR Standard\Snapshot> or an alternative file path chosen by the user.

There are two ways to take a snapshot. The first is to click on the <Snapshot> icon. A snapshot will be taken and displayed in a new window. Click <OK> to save the file. The second way is to right click on the window, and select <Snapshot>. The file will be saved without displaying the image.

E-Map

Click on the <E-map> icon to open the E-Map program. The E-Map is a program that allows the user to illustrate the positions of the cameras on a self selected image. If the PC-NVR Standard is being used to monitor multiple locations, the user can have multiple images to display the location of the cameras.

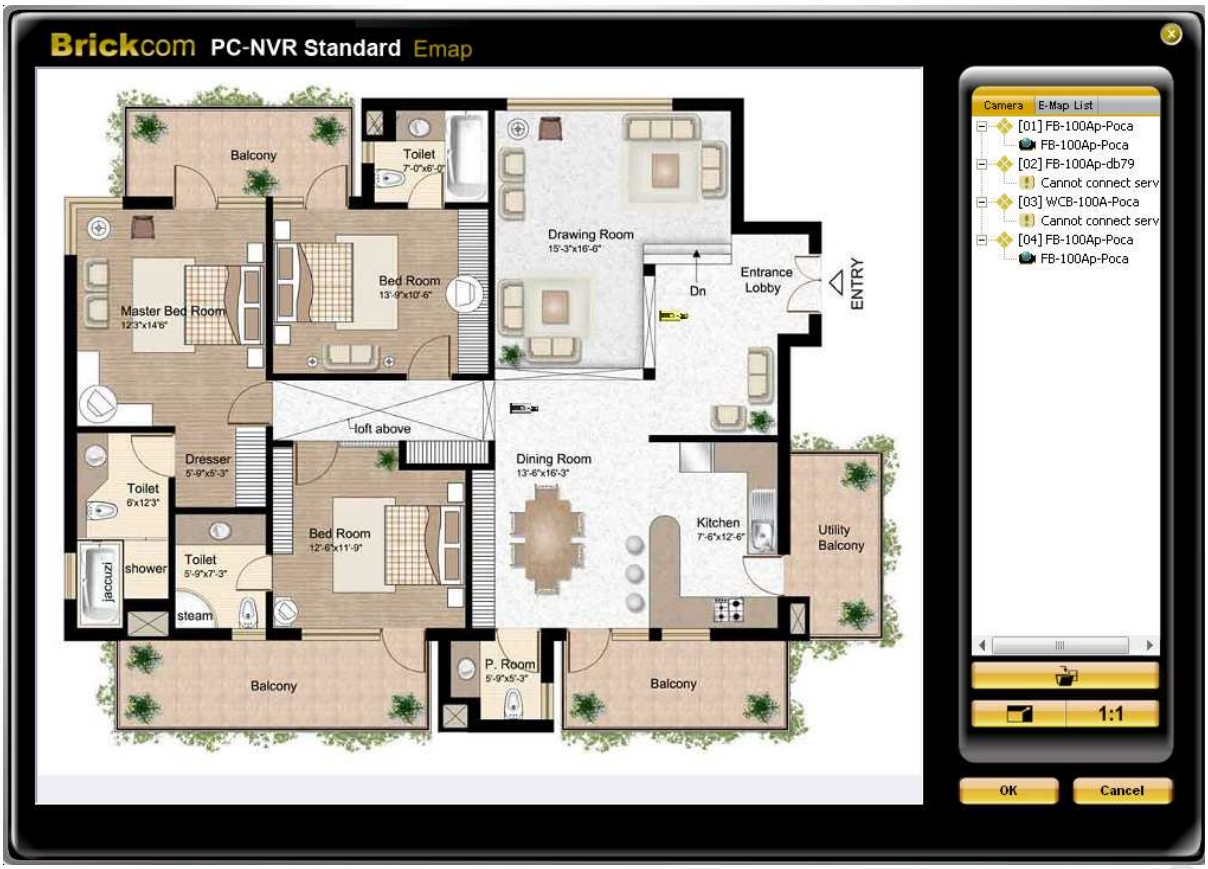

To add an image to the E-Map, click on the <Load Image> icon. The figure below is the Load Image window to add or delete images. Click on <Add> to add an image. After the image is loaded, the filename of the image will be displayed on the list. “Index” indicates the order (starting from “1”) of the files. Click <Ok> to save the settings.

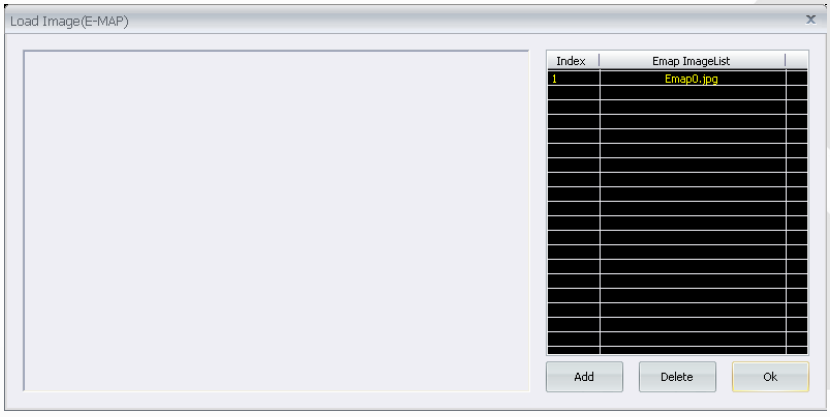

To add cameras to the E-Map, click <E-Map List> to list the map images. The user can select an image and it will be displayed in the E-Map main window. Click <Camera> on the control panel to list the site tree. Drag and drop a camera from the site tree to any desired position on the main image.

The user can right click on a camera icon to access Live View, remove the camera, or rotate its recording direction. The rotating directions include: Top, Top-Right, Right, Bottom-Right, Bottom, Top-Left, Left, and Bottom-Left.

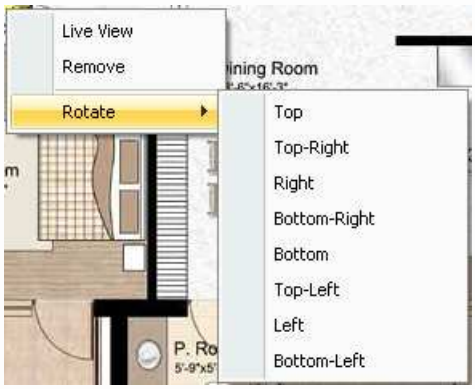

When the mouse pointer scrolls over a camera icon in the image, an information dialog box will be displayed as below.

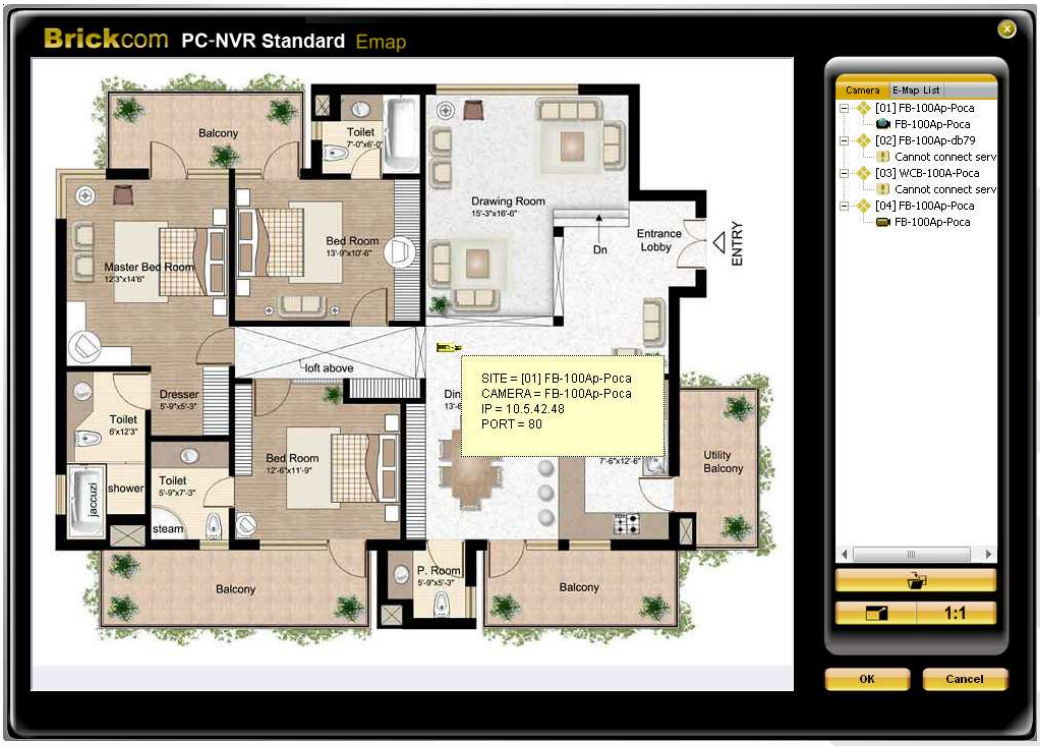

Double click on any camera icon in the image to display the live preview image of the camera. Right click on the camera preview window to display the camera control menu. The menu items includes: Snapshot, Sound Notification (On/Off), and Camera Info.

.

Lock

The Lock function is to protect the PC-NVR when the user needs to be away from the computer for any length of time. This function is the same as the computer's screensaver.

Click on the <Lock> icon and a confirmation message will be displayed as below. Click "Yes" to confirm.

To unlock, click on the icon again. The user will need to enter the username and password to unlock the PC-NVR. A window as shown below will be displayed.